

# 5DT Data Glove Ultra Series



## User's Manual

**5DT**

Fifth Dimension Technologies

[www.5DT.com](http://www.5DT.com)

# ***5DT Data Glove Ultra***

## **User's Manual**

Copyright © 2004 5DT (Fifth Dimension Technologies), All rights reserved. No part of this manual, software or hardware may be copied, reproduced, translated or reduced to any electronic medium or machine readable format without the written consent of 5DT (Fifth Dimension Technologies).

All trademarks and trade names are the respective property of their owners.

*Version 1.1*

*October 2004*

## Table of Contents

---

1. Introduction.....	1
2. Setup and Installation.....	2
2.1. Package Contents .....	2
2.2. Connecting the Glove .....	2
3. Software Installation.....	3
3.1. CD Contents .....	3
3.2. Installed Software .....	4
4. Using GloveManager .....	5
4.1. Starting GloveManager.....	5
4.2. Opening USB Gloves.....	5
4.2.1 Scanning for Gloves .....	5
4.2.2 Opening Gloves.....	6
4.3. Opening Serial and Wireless Gloves.....	8
4.3.1 Scanning for Gloves .....	8
4.3.2 Opening Gloves.....	8
4.4. The Graph View.....	10
4.4.1 The Menu Bar.....	11
4.4.2 Toolbar.....	12
4.4.3 Tab Bar .....	13
4.4.4 The Sensor Graphs .....	13
4.4.5 The Sensor Info Box.....	14
4.4.6 The Status Bar.....	16
4.5. The Sensor Selection View.....	16
4.6. Glove Calibration .....	17
4.7. Recording.....	19
5. Using the Gloves in Kaydara MOCAP™.....	20
5.1. Installation.....	20
5.2. Opening the Glove .....	20
5.3. Opening Wireless Gloves .....	21
5.4. Calibration.....	23
5.5. Model Binding .....	24
6. Using the SDK.....	27
6.1. Introduction .....	27
6.2. Using the SDK .....	27

6.3.	Sample Source Code.....	27
6.4.	Supported Gloves .....	28
6.5.	Sensor Mappings for the 5DT Data Glove 5 .....	28
6.6.	Sensor Mappings for the 5DT Data Glove 16 and 14 Ultra.....	29
6.7.	Gesture Definitions .....	30
6.8.	Auto-Calibration .....	32
7.	Troubleshooting and Support.....	33
7.1.	General Troubleshooting .....	33
7.1.1	Physical Connection Problems.....	33
7.1.2	Software Connection Problems.....	33
7.2.	Frequently Asked Questions (FAQ).....	33
7.3.	Support .....	34
8.	Warranty Information.....	35
8.1.	Thirty (30) Day Customer Satisfaction Guarantee .....	35
8.2.	One (1) Year Product Warranty .....	35
8.3.	Exclusions.....	35
8.4.	Warranty Claim Instructions.....	35
9.	About 5DT .....	37
	Appendix A – Hardware Specifications .....	39
	Appendix B – Serial Protocol .....	40
	Appendix C – SDK Function Descriptions .....	42

## 1. Introduction

---

The 5DT Data Glove Ultra is a hand data motion capturing solution for animation and virtual reality.

The 5DT Data Glove Ultra is the second generation of 5DT's high-end data glove and has been completely redesigned and optimized for the best performance and ease of use. This glove measures finger flexure as well as the abduction between the fingers. Finger flexure is measured at two places (1<sup>st</sup> joint (knuckle), 2<sup>nd</sup> joint) on each finger.

Among the features of this kit are:

- The glove is comfortable with an improved design for differently-sized hands.
- The accurate and sensitive sensors give a clean signal, minimizing the need for additional filtering.
- Diagnostic software is included with the capability to record hand data.
- The package includes a plug-in for Kaydara MOCAP™.
- The gloves' functions and data are accessible via the 5DT Data Glove SDK.
- The glove data stream from the optional serial kit is an RS-232 data stream with an open protocol allowing for various platform implementations.

## 2. Setup and Installation

---

### 2.1. Package Contents


When first unpacking your glove, please ensure that all the parts are there. If you are missing anything please contact 5DT or your reseller immediately.

The 5DT Data Glove Ultra consists of the following:

1. 5DT Data Glove Ultra (5 or 14 Sensor)
2. 5DT Data Glove Ultra Series USB cable
3. 5DT Data Glove CD

### 2.2. Connecting the Glove

Connect the glove to the PC as shown in Figure 1.

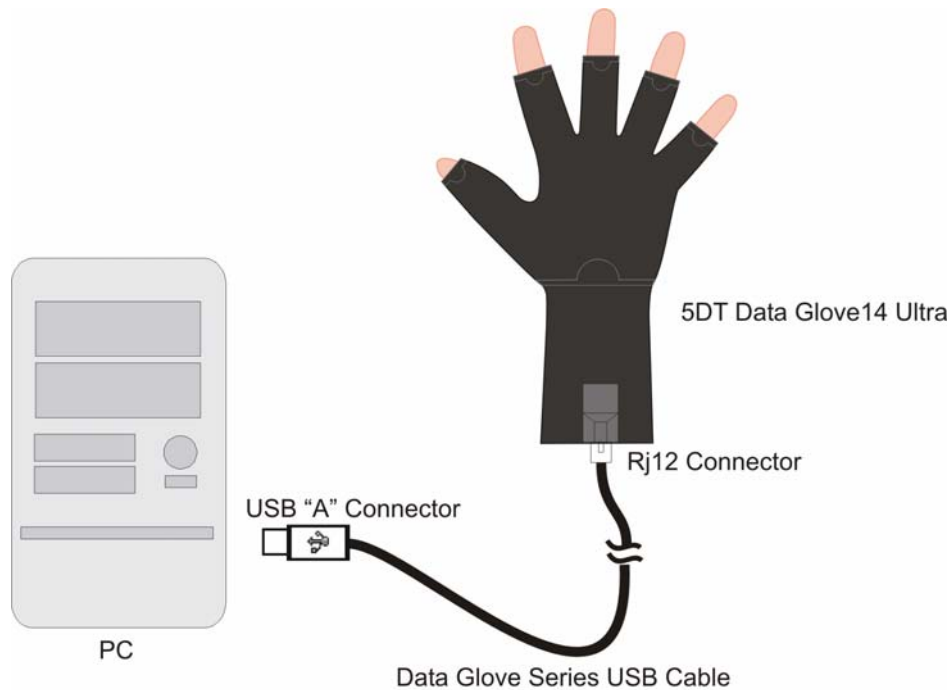

**Figure 1 – Connecting the Glove to the PC.**

You can use GloveManager to test the operation of the glove. Detail on this is given in Section 4 of this manual.

### 3. Software Installation

---

Your package comes with a CD that contains documentation and utilities to help you get up and running with the gloves as quickly as possible.

Most of the supplied programs and software are intended for 32-bit Windows, and require Windows 98, ME, 2000, or XP.

The setup program should run when you insert the CD, but if it doesn't, run the program **setup.exe** in the **install** directory and follow the on-screen instructions.

When prompted, check the 5DT Data Glove Ultra box to install the software for this product.

#### 3.1. CD Contents

The CD contains the following directories:

##### ...\Acrobat

This copy of Adobe® Acrobat® Reader will allow you to read the documentation.

##### ...\DirectX

The CD-ROM also contains the redistributable version of DirectX 9.0. You will need this if you want to run the DirectX implementations of the Glove Demos (DirectX and OpenGL demos are supplied). To install DirectX 9.0, open the folder and run **dxsetup.exe**.

##### ...\Install

This contains the software installation files.

### 3.2. Installed Software

By default the setup program will install your files to the following directory:

**C:\Program Files\5DT\Data Glove Ultra**

The installation contains the following directories:

#### **...\Demo**

This folder contains the 3D glove demo. Click on **GloveDemo.exe** to start the demo<sup>1</sup>.

#### **...\Documents**

This directory contains the electronic copy of this manual in pdf format and application notes as they become available.

#### **...\GloveManager**

GloveManager is a program that allows you to test your gloves and access advanced glove functions which may not be available in the plug-ins. More detail on this is given in Section 4.

#### **...\Plugins**

This directory contains the plug-in for Kaydara MOCAP™ which replaces the built-in Kaydara glove plug-in. More detail on this is given in Section 5.

#### **...\SDK**

This directory contains the 5DT Glove SDK files. These are described in detail in Section 6.

---

<sup>1</sup> The 3D glove demo will not function with the Data Glove Ultra USB.



## 4. Using GloveManager

The 5DT GloveManager is a useful tool accompanying the Data Glove which may be used for the following:

- Testing the 5DT Data Glove
- Obtaining good calibrated values for the 5DT Data Glove
- Logging data obtained from the 5DT Data Glove

*Note: All images are shown for the Data Glove 14 Ultra. Images will differ slightly for the Data Glove 5 Ultra.*

### 4.1. Starting GloveManager

Start the program by running GloveManager.exe, which is installed in the **\Data Glove Ultra\GloveManager\** folder by default. The setup tab window will appear (see below).

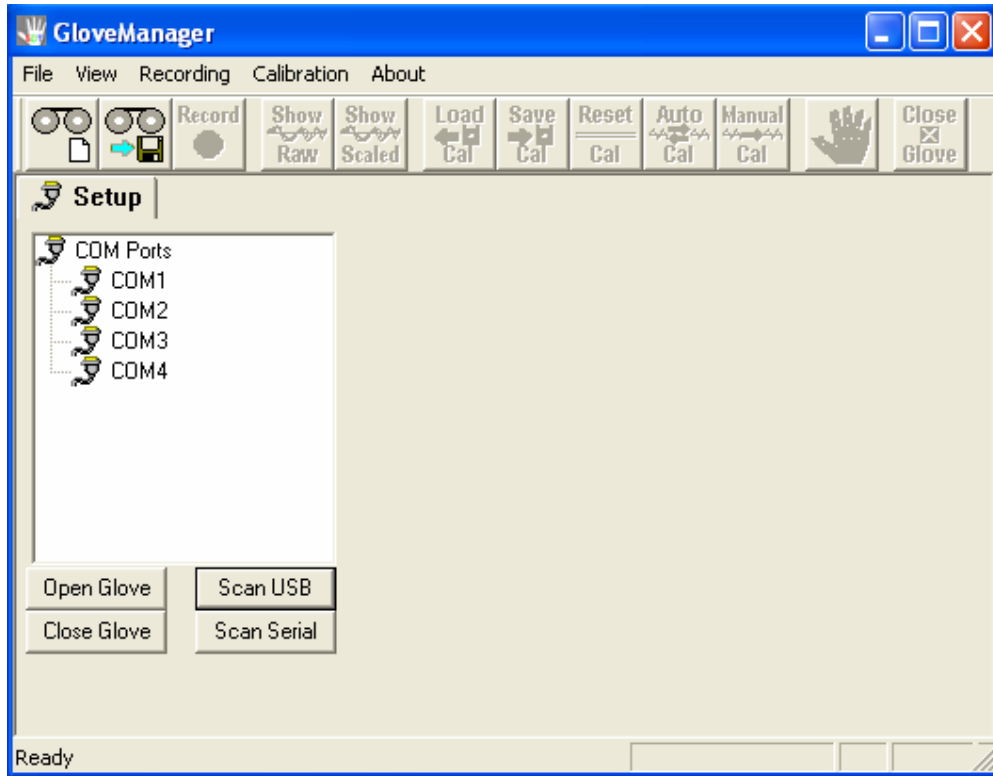



Figure 2 – The Setup Tab Window

### 4.2. Opening USB Gloves

#### 4.2.1 Scanning for Gloves

Clicking the **Scan USB** button in the setup tab window causes GloveManager to scan the USB for available gloves. This is useful if you have plugged in the


glove after starting GloveManager. Once the USB scan is complete the USB device tree will be updated to show available gloves.

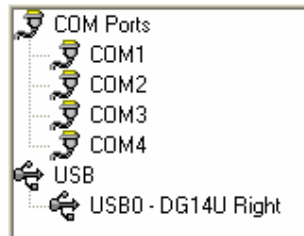


**Figure 3 – Result of the USB Scan**

As can be seen in Figure 3, the Port Scan has found two wireless gloves on COM1. The right hand glove is plugged into Port A of the wireless transmitter unit. The left hand glove is plugged into Port B.


#### **4.2.2 Opening Gloves**

A glove may be opened by clicking the  button after a USB glove has been selected in the device tree.

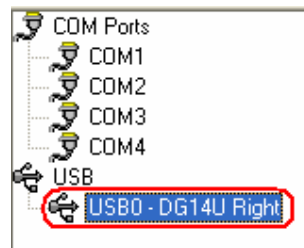

**Figure 4 – Selecting the Glove to be Opened**

If the glove has been successfully opened the tab window will automatically switch to the newly opened glove, as shown in Figure 5. Double-clicking on a USB glove will also cause GloveManager to attempt to open the glove.

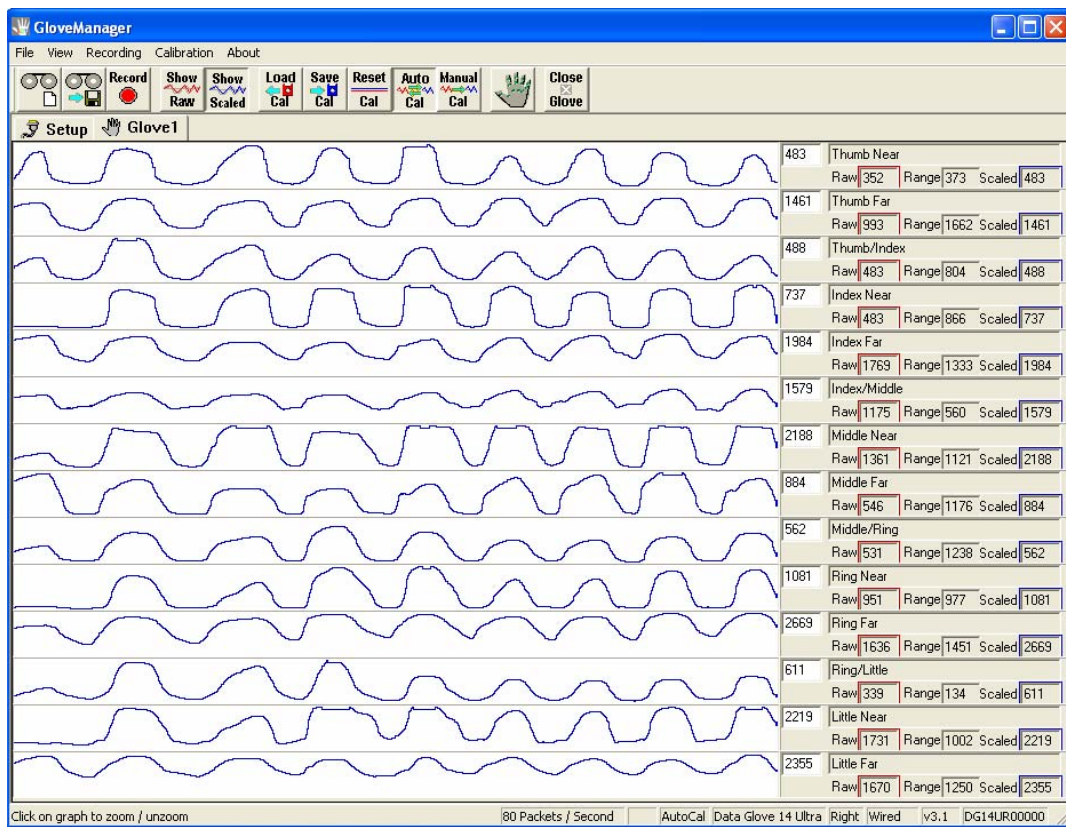


**Figure 5 – GloveManager after the USB Glove is Successfully Opened**

Clicking on the **Setup** tab will cause GloveManager to display the setup tab window again. To open the second wireless glove, select it from the COM port tree.

## 4.3. Opening Serial and Wireless Gloves

### 4.3.1 Scanning for Gloves

Clicking the **Scan Serial** button in the setup tab window causes GloveManager to scan the COM ports for available gloves. This is useful if you do not know on which COM port your glove is connected to, or you simply want to scan for available gloves. Once the COM port scan is complete the COM port tree will be updated to show available gloves.

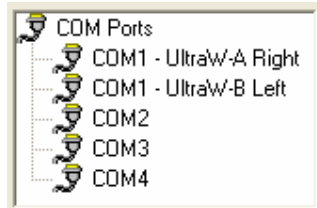


**Figure 6 – Result of the Port Scan**

As can be seen in Figure 6, the Port Scan has found two wireless gloves on COM1. The right hand glove is plugged into Port A of the wireless transmitter unit. The left hand glove is plugged into Port B.


### 4.3.2 Opening Gloves

A glove may be opened by clicking the **Open Glove** button after a COM port has been selected in the COM port tree.

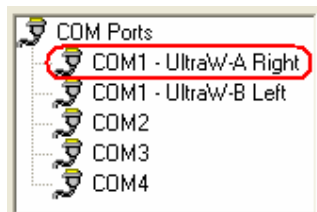


**Figure 7 – Selecting the First Glove to be Opened**

If the glove has been successfully opened the tab window will automatically switch to the newly opened glove, as shown in Figure 8. Double-clicking on a COM port will also cause GloveManager to attempt to open a glove on that COM port.

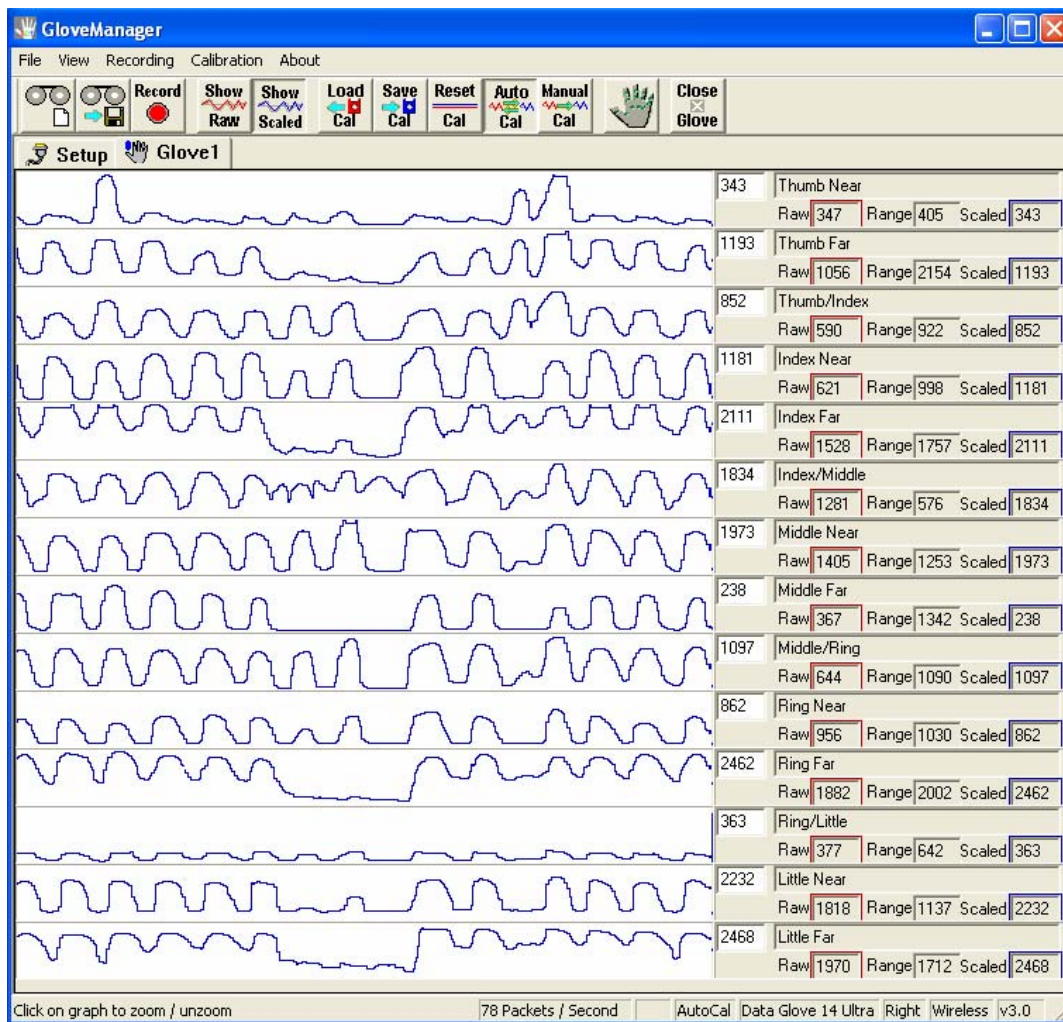

**Figure 8 – GloveManager after the First Glove is Successfully Opened**

Clicking on the **Setup** tab will cause GloveManager to display the setup tab window again. To open the second wireless glove, select it from the COM port tree.

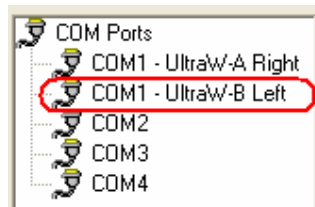

**Figure 9 – Selecting the Second Glove to be Opened**

Click on the **Open Glove** button again to open the second glove. If GloveManager was successful in opening the second glove, a new glove tab window will appear.



**Figure 10 – The Tab Bar with Two Gloves Open**

You may switch between open gloves by clicking on either of the Glove Tabs.

#### **4.4. The Graph View**

The following information fields are available in Graph View:

- Menu bar
- Toolbar
- Tab bar – Allows you to tab between gloves
- Sensor graph – A real-time graph of the glove sensor
- Sensor name and values – Displays the sensor name and the following real-time values (the amount of information displayed is dependent on the resolution available):
  - Raw sensor value [Value between 0 and 4095]
  - Sensor dynamic range [Value between 0 and 4095]
  - Scaled sensor value [*Scaled* value from 0 to 4095]
  - Lower calibrated value [Value between 0 and 4095]
  - Upper calibrated value [Value between 0 and 4095]
  - Graph top value [Value between 0 and 4095]
  - Current graph value [Value between 0 and 4095]
  - Graph bottom value [Value between 0 and 4095]
- Status bar – Displays status information, such as:
  - Program status and information messages
  - The packet rate
  - An indication if recording is currently on
  - An indication if auto calibration is currently on
  - The model of the current glove
  - The handedness of the current glove
  - An indication if the current glove is wired or wireless
  - The firmware version of the current glove



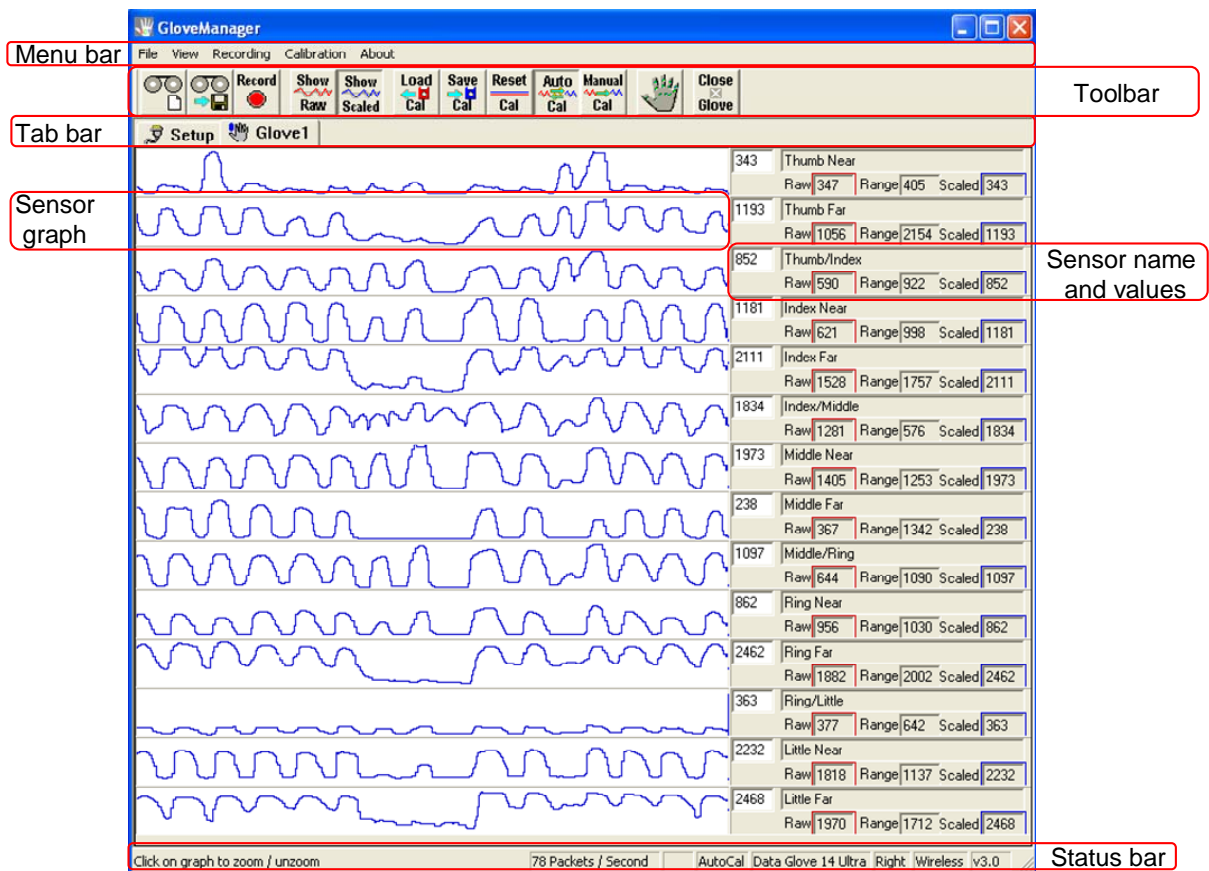


Figure 11 – Available Fields in Graph View

#### 4.4.1 The Menu Bar

The following commands are available from the menu:










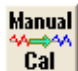


Item	Shortcut	Description
File   New Recording	Ctrl+N	Creates a new recording file
File   Save Recording	Ctrl+S	Saves the current recording
File   Save Recording As...		Saves the current recording as a new file name
File   Close Current Glove	Alt+C	Closes the currently visible glove
File   Exit		Exits GloveManager
View   Toolbar		Shows/Hides the Toolbar
View   Status Bar		Shows/Hides the Status Bar
View   Show View Setup	V	Toggles between the sensor selection and the graph view
View   Show Scaled Graphs	S	Shows/Hides the Scaled Graphs
View   Show Raw Graphs	X	Shows/Hides the Raw Graphs
Recording   Record	Ctrl+R	Toggles recording of glove data on or off

Item	Shortcut	Description
Calibration   Auto Calibration	A	Toggles between auto and manual calibration
Calibration   Manual Calibration	M	Toggles between auto and manual calibration
Calibration   Reset Calibration	R	Resets the auto calibration values, and turns auto calibration on
Calibration   Load Calibration Values	Alt+O	Load the calibration values from file, turns auto calibration off
Calibration   Save Calibration Values	Alt+S	Save the current calibration values to file
About   About GloveManager...		Displays information about GloveManager

**Table 1 – Menu Commands Available in GloveManager**

#### 4.4.2 Toolbar

The following buttons are available on the toolbar:

Icon	Shortcut	Description
	Ctrl+N	Creates a new recording file
	Ctrl+S	Saves the current recording
	Ctrl+R	Toggles recording of glove data on or off
	X	Shows/Hides the raw graphs
	S	Shows/Hides the scaled graphs
	R	Resets the auto calibration values, and turns auto calibration on
	Alt+O	Load the calibration values from file, turns auto calibration off
	Alt+S	Save the current calibration values to file
	A	Toggles between auto and manual calibration
	M	Toggles between auto and manual calibration
	V	Toggles between the sensor view setup and the graph view
	Alt+C	Closes the currently visible glove

**Table 2 – Buttons Available on the GloveManager Toolbar**



Some items may be disabled when no glove is open.

#### 4.4.3 Tab Bar

The tab bar allows you to switch between the Setup view and the currently open gloves. The blue dot on the tab icon indicates a wireless glove.



Figure 12 – The Tab Bar

#### 4.4.4 The Sensor Graphs

The sensor graph is a graphical representation of the data from the sensors as it arrives. Two graph representations can be shown:

The scaled graph (showing the values scaled between 0 and 4095)

The raw graph (showing the raw values between 0 and 4095)

##### 4.4.4.1 Scaled Graph

The scaled graph shows the scaled version of the sensor value, normalized between 0 and 1. The default color for this graph is blue.

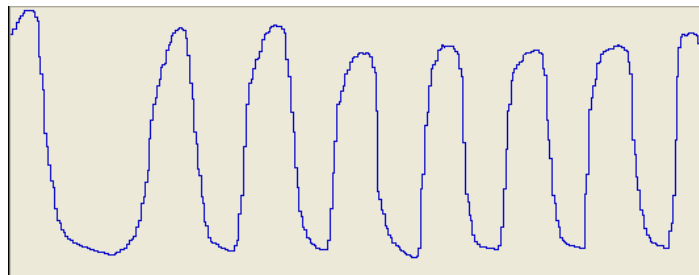


Figure 13 – The Scaled Graph

##### 4.4.4.2 Raw Graph

The raw graph represents the raw sensor value coming from the glove. Additional to the actual graph of the raw values (drawn in red by default), the upper (drawn in green by default) and lower calibration (drawn in orange by default) values are also plotted, as shown in Figure 14.


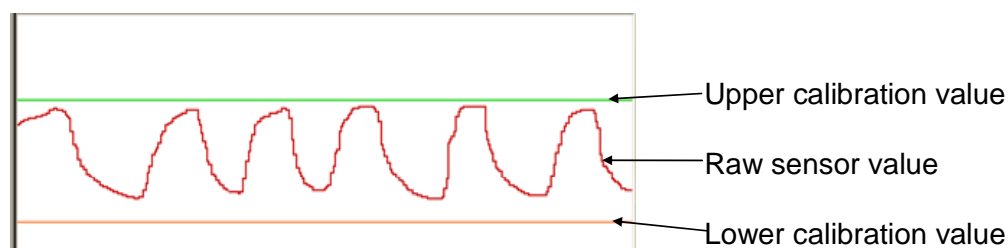


Figure 14 – The Raw Graph

#### 4.4.4.3 Graph Zooming

You may zoom into a graph by simply clicking on it, as illustrated below:

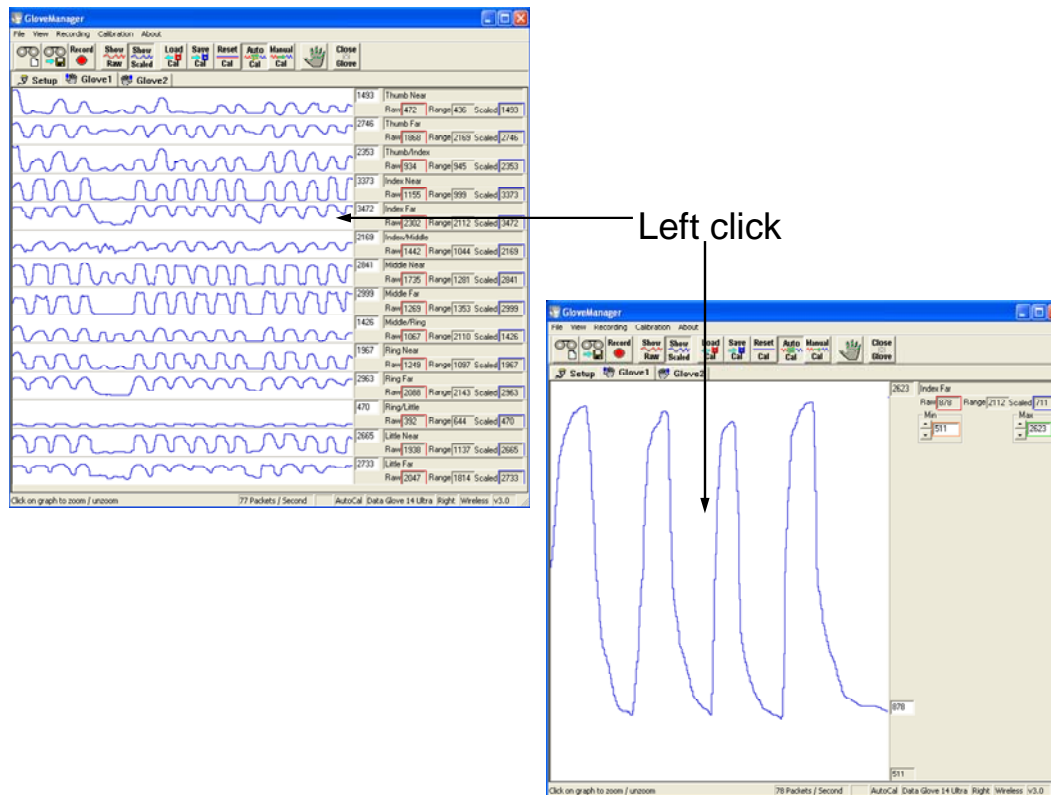


**Figure 15 – An Illustration of the Zoom Procedure**

The zoomed view gives you a more detailed view of the graph, and allows you to do fine-tuning of the calibration value.

#### 4.4.5 The Sensor Info Box

The sensor info box provides the following information (see Figure 16):

- Raw sensor value [Value between 0 and 4095]
- Sensor dynamic range [Value between 0 and 4095]
- Scaled sensor value [Scaled value from 0 to 4095]
- Lower calibrated value [Value between 0 and 4095]
- Upper calibrated value [Value between 0 and 4095]
- Graph top value [Value between 0 and 4095]
- Current graph value [Value between 0 and 4095]
- Graph bottom value [Value between 0 and 4095]

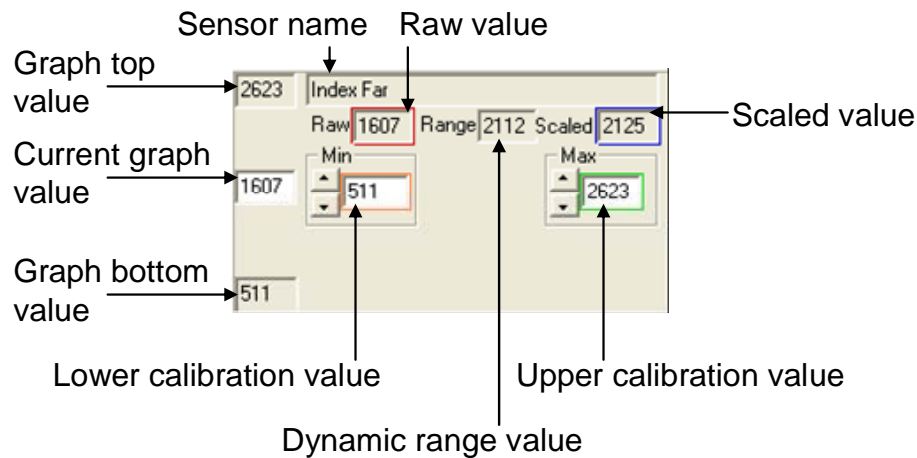


**Figure 16 – The Sensor Info Box**

The upper and lower calibration values may be fine-tuned by adjusting the minimum and maximum values of the dynamic range. These values are automatically adjusted during auto calibration. Please note that the calibration mode is automatically switched to manual calibration during fine-tuning.

The sensor info box has three levels of detail, depending on the pixel resolution available to GloveManager. The highest level of detail is shown in Figure 16. As the pixel resolution decreases, the second level of detail is switched to, as in Figure 17. The value shown next to the sensor name is:

- the current scaled value (when scaled graphs are visible)
- the current raw value (when raw graphs are visible)



**Figure 17 – The Second Level of Detail of the Sensor Info Box.**

If the pixel resolution is decreased more, only the sensor name and current graph value are shown.



**Figure 18 – The Lowest Level of Detail of the Sensor Info Box.**

#### 4.4.6 The Status Bar

The status bar displays various program and glove related information, including:

- Program status and information messages
- The packet rate
- An indication if recording is currently on
- An indication if auto calibration is currently on
- The model of the current glove
- The handedness of the current glove
- An indication if the current glove is wired or wireless
- The firmware version of the current glove

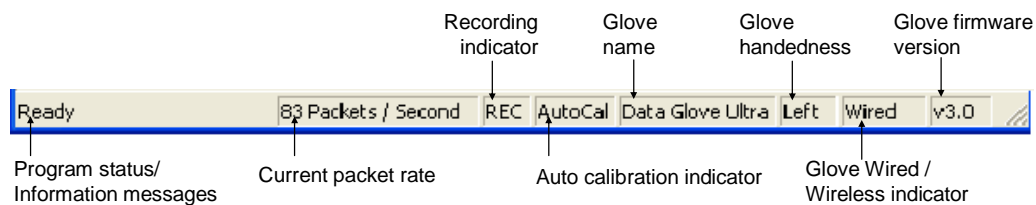



Figure 19 - The Status Bar



#### 4.5. The Sensor Selection View

The sensor selection view may be obtained by clicking the  button on the toolbar, by selecting the **View | Show View Setup** option from the menu or by pressing the **V** shortcut key. The view is shown in Figure 20.

The hand and sensor image on the left allows you to select sensors to be used during recording. Selecting none means that this glove will not be used during the recording process.

The hand and sensor image on the right allows you to select specific sensors to be shown in graph view. Please note that the program will not allow you to display zero sensors.

Clicking the , , , , , or  buttons causes the corresponding sensors to be selected or deselected. You may also select or deselect a sensor by clicking on it (● or ●).

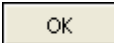You may go back to graph view by clicking on the  or  buttons, by selecting the **View | Show View Setup** option from the menu or by pressing the **V** shortcut key.

#### 4.6. Glove Calibration

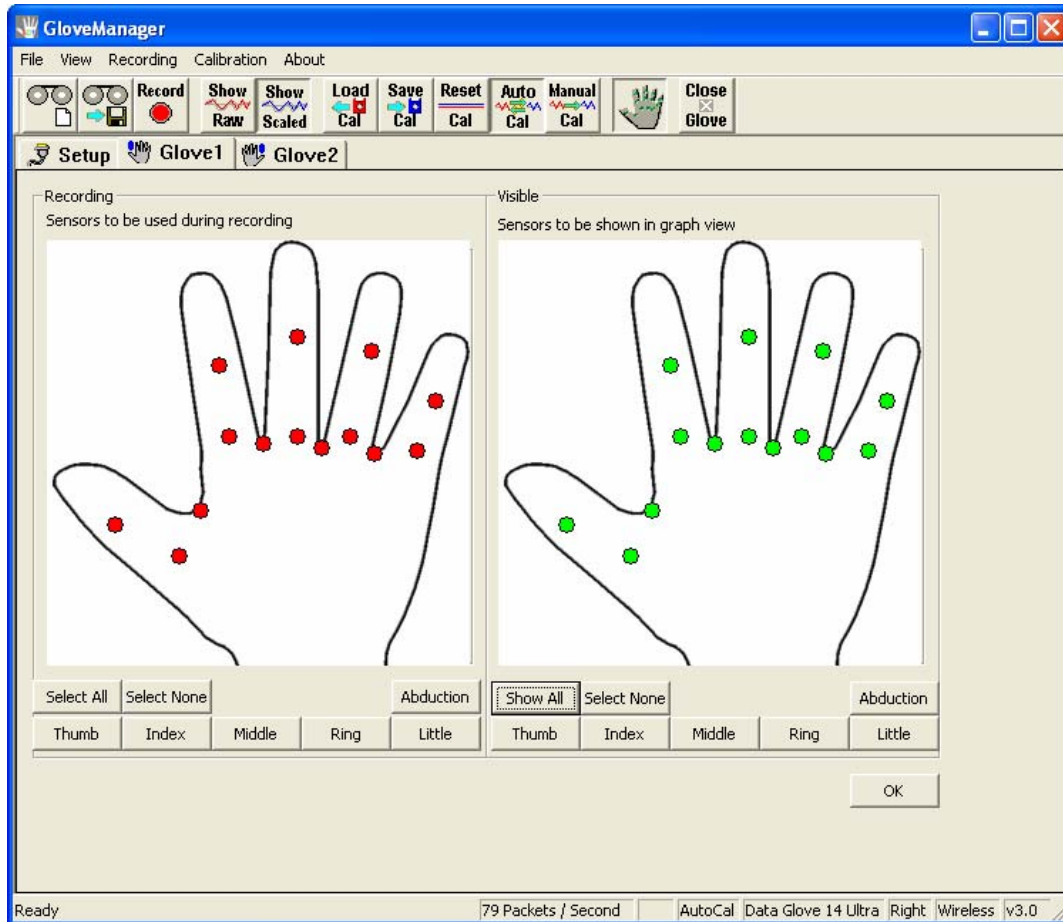

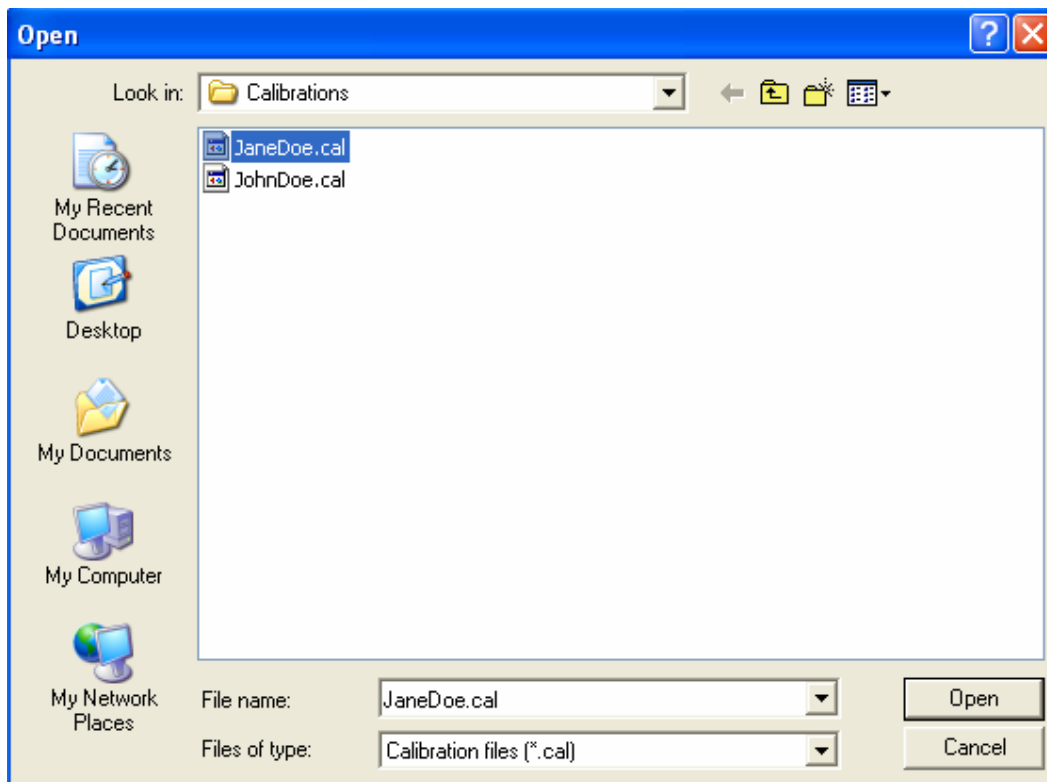




Figure 20 – The Sensor Selection View


Glove calibration values may be loaded from file by clicking the  button, by selecting the **Calibration | Load Calibration Values** menu option, or by using the **Alt+O** shortcut key. The file open dialog box will appear.



**Figure 21 – The File Open Dialog for Calibration Files**

Select a calibration file (extension .cal) and click on the  button to open the file.


Glove calibration values may be saved to file by clicking the  button, by selecting the **Calibration | Save Calibration Values** menu option, or by using the **Alt+S** shortcut key. The file save dialog box will appear.

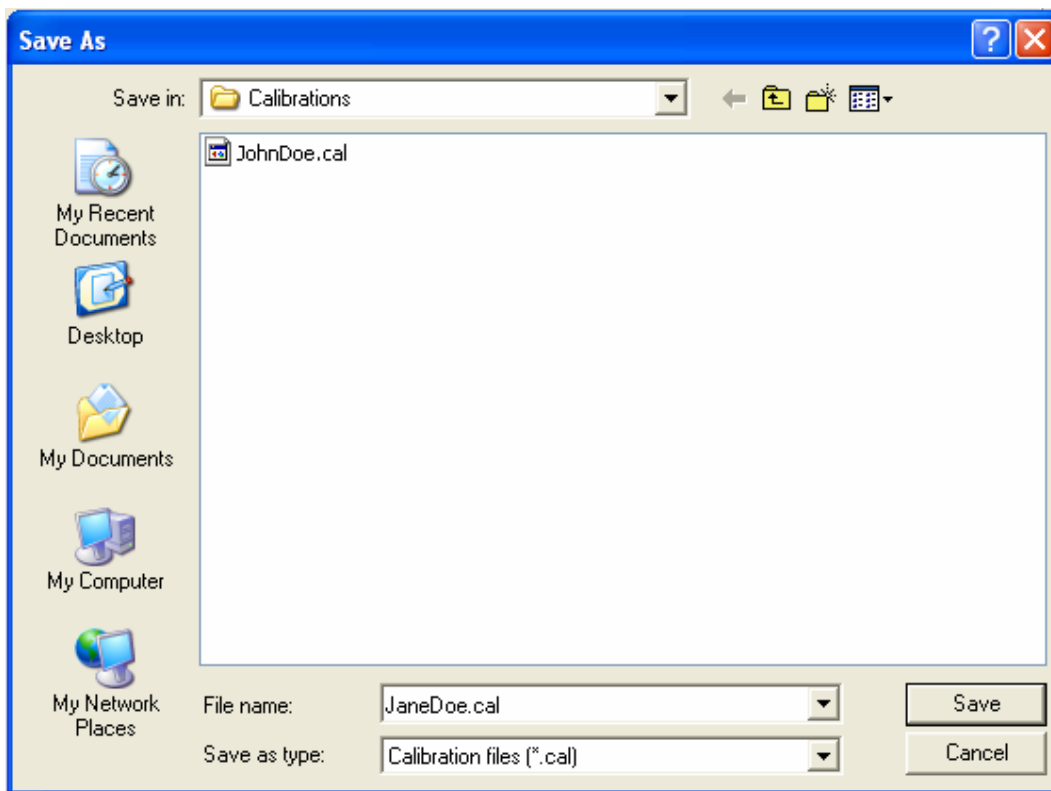


**Figure 22 – The File Save Dialog for Calibration Files**

Type in your file name and click the  button to save the calibration values to file. The file format is also compatible with the 5DT Data Glove SDK.

#### 4.7. Recording

The incoming glove data may be recorded by clicking the  button, by selecting the **Recording | Record** menu option, or by using the **Ctrl+R** shortcut key. This will cause GloveManager to record the latest raw and scaled values at a fixed rate of 60 Hz. Only the sensors selected for recording in the sensor setup view (see section 4.5) will be recorded. These values are recorded in memory and will be lost unless saved to file.

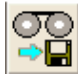The values may be saved to file, by clicking the  button, by selecting the **File | Save** or **File | Save As...** menu option, or by using the **Ctrl+S** shortcut key. Currently only the CSV (Comma Separated Values) file format is supported.

## 5. Using the Gloves in Kaydara MOCAP™

---

### 5.1. Installation

To install the driver, follow the steps given below.

1. Copy the file **ordevice5dt.dll** to the [MOCAP]\bin\plugins directory.
2. Make sure that the 5DT Glove driver is installed – specifically fglove.dll should be installed in the Windows\System folder.
3. Run MOCAP.
4. Verify that the driver is installed by clicking on the Devices tab in the asset browser. The installed driver should be visible as shown in the red rectangle as shown in Figure 23 below.


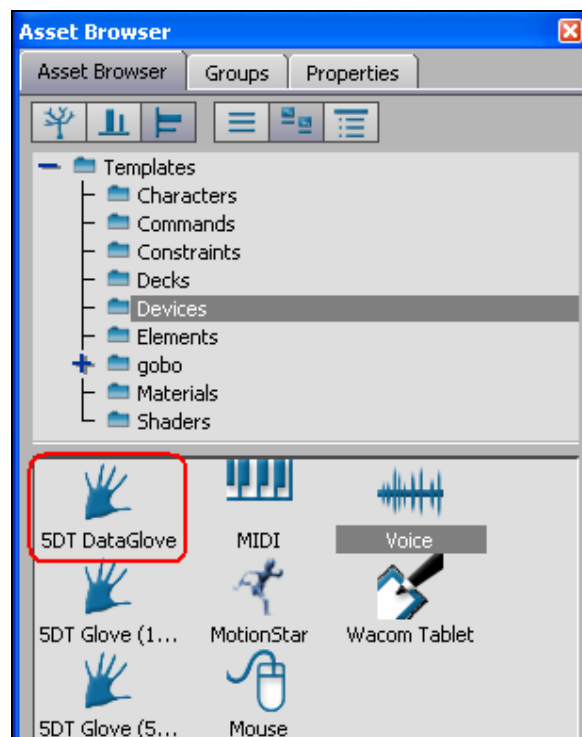


Figure 23 - Verifying that the 5DT Data Glove Plugin has been Installed

### 5.2. Opening the Glove


From the device pane of the Asset Browser, create a glove in Kaydara by clicking and dragging the 5DT DataGlove icon to the viewer window (see Figure 24).



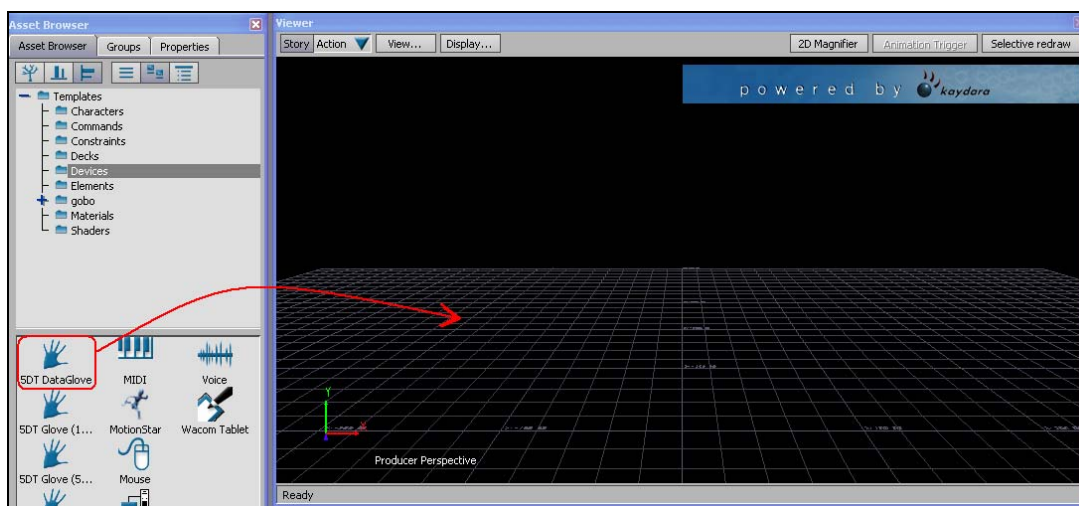

**Figure 24 - Clicking and Dragging the 5DT DataGlove Icon to Create a New Glove**

In the navigator pane, click on the newly created glove. The following window will appear:

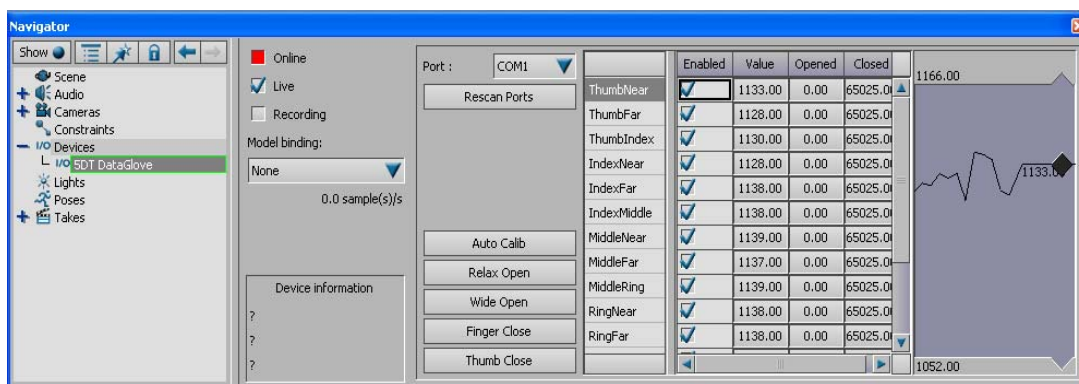

**Figure 25 - The Glove Control Pane**

If you know which port the glove is connected to, select it from the ports drop-down list.

If you are unsure as to which port your glove is connected to you may click on the **Rescan Ports** button. The driver will then scan the USB and all COM ports for available gloves and update the Ports drop-down list. The progress of the scan process is shown in the status bar in the Viewer window. Please note that the scan process may take a while.

Once the correct port has been selected, click on the **Online** button. If the red button turns green, a successful connection has been made.


### 5.3. Opening Wireless Gloves

The new 5DT Data Glove Ultra Wireless Kit uses one COM port for receiving data from both gloves connected to the transmitter unit. The driver handles this transparently by allowing you to open two gloves on the same port. Only once

the first glove is opened will the second one be opened by the driver. You may open and close either of these gloves any time you wish.


The process of opening two wireless gloves is illustrated next:

1. The first glove is created (by dragging the 5DT DataGlove icon from the device pane into the viewer window) and a port scan is performed. We can see that there is a glove present on COM1-A.

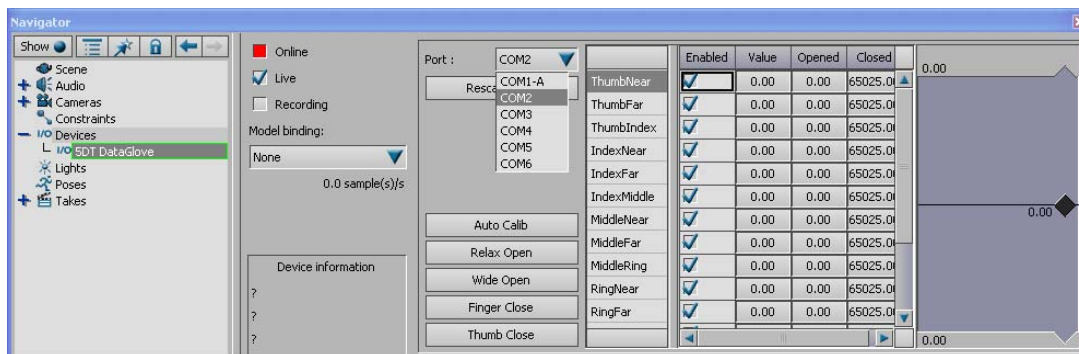

**Figure 26 – Result of the First Port Scan**

2. The first glove is opened by selecting the correct port and clicking on the **Online** check box.

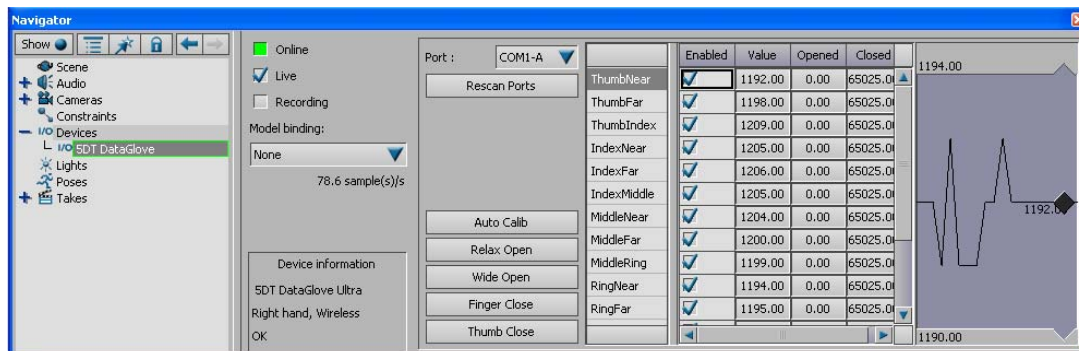

**Figure 27 – Glove A has been opened**

3. The second glove is created by dragging the 5DT DataGlove icon from the device pane into the viewer window. The driver automatically picks up that another wireless glove may be opened on COM1-B and adds this to the ports list.

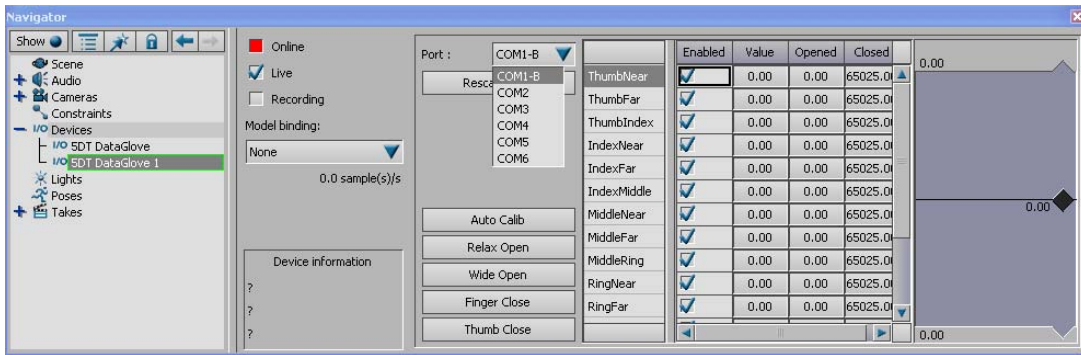


Figure 28 - Result of the Second Port Scan

- The second glove is opened by selecting the correct port and clicking on the **Online** check box.

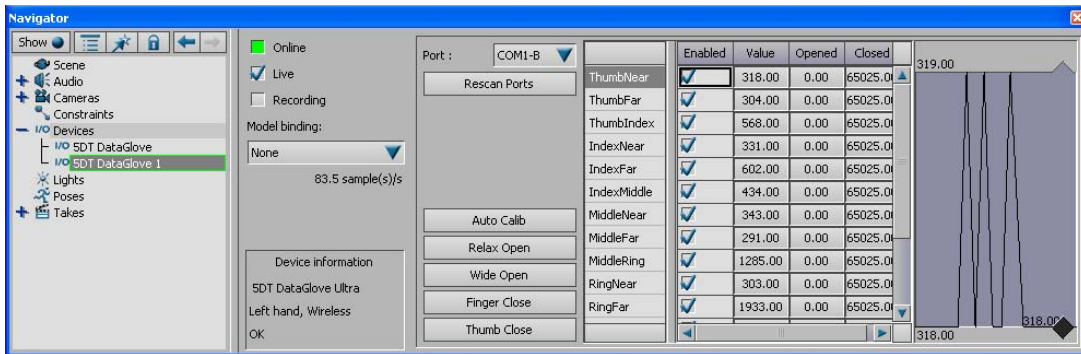


Figure 29 - Glove B has been Opened

## 5.4. Calibration

You may use auto calibration to calibrate the glove, but it is recommended that you use the pre-defined calibration steps.

To use auto calibration, click on the **Auto Calib** button. The button text will change to **Click to Stop**. Once you are satisfied with the calibration values, click the button again to stop calibrating.

The following calibration process is recommended.

- Hold your hand in a relaxed, open position, and click on the **Relax Open** button.
- Open all of your fingers as wide as possible and click on the **Wide Open** button.
- Close all of your fingers (except your thumb) and click on the **Finger Close** button.
- Close your thumb and click on the **Thumb Close** button.
- Calibration is now complete.

## 5.5. Model Binding

To create a model binding, select Create... from the Model binding drop-down menu as in Figure 30.

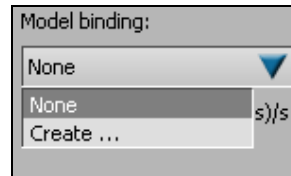


Figure 30 - The Model Binding Drop-down List

After the Create command has been issued the wire frame hand model is created in the viewer and the model's name is added to the Model binding drop-down list.

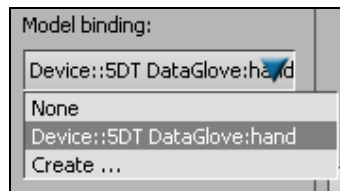


Figure 31 - The Model Binding Drop-down List with Hand


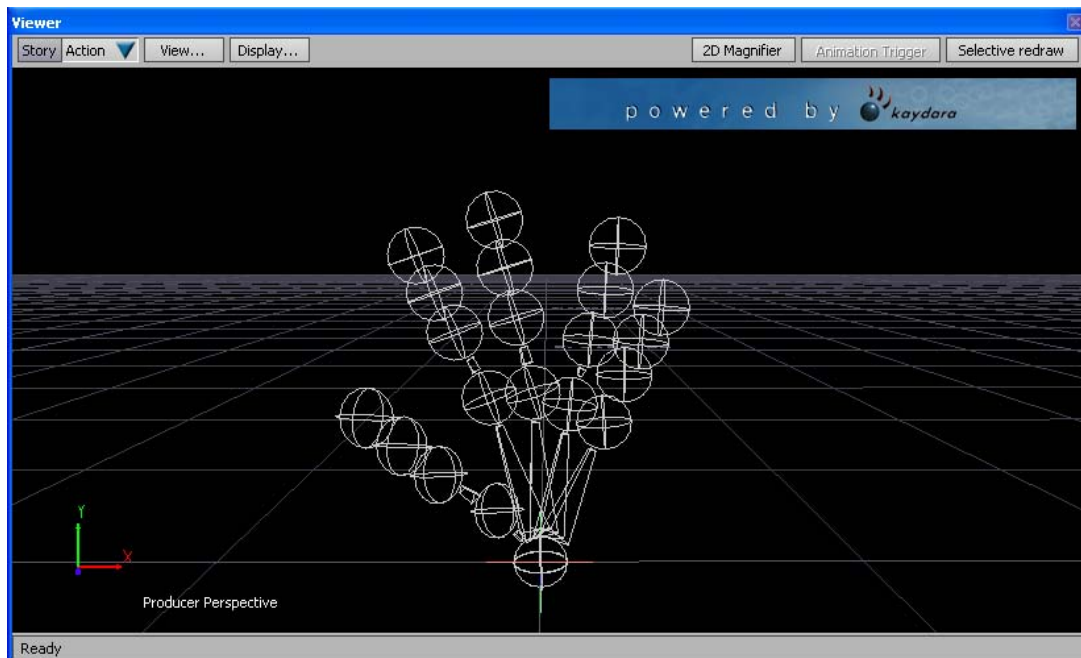



Figure 32 – The Glove Model as Shown in the Viewer Window

This glove can now be automatically connected to an actor. To create an actor, click and drag the Actor icon from the Characters pane in the Asset Browser.

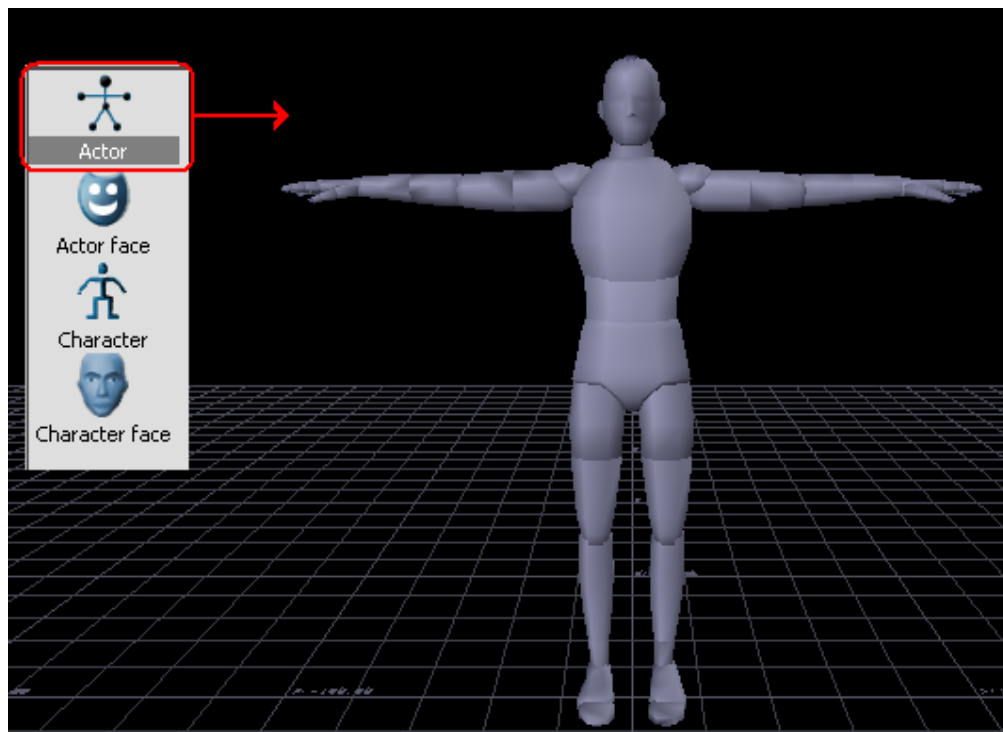


**Figure 33 – Creating an Actor**

If the actor asset is selected in the Navigator window, the Actor Settings window will appear.

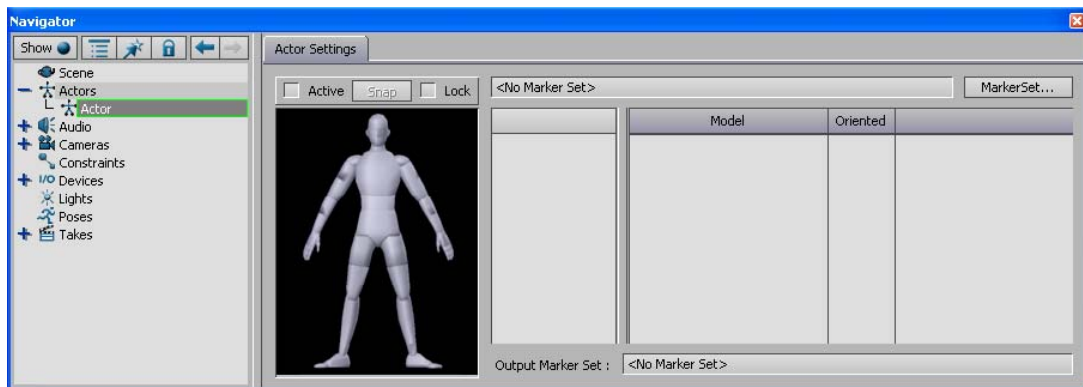


**Figure 34 – The Actor Settings Window**

If no Marker Set exists for this actor create one by clicking on the MarkerSet... button. A popup menu will appear. Select the Create option.

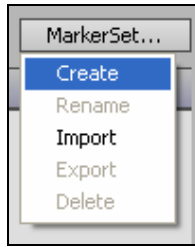

**Figure 35 – Creating a Marker Set**

Once a Marker Set has been selected, select the hand marker to which the glove should be referenced. Drop the root of the glove device (under the Scene branch) into the Glove Reference in the Model column. Click on the Active checkbox to make the actor active (real-time animations are shown).

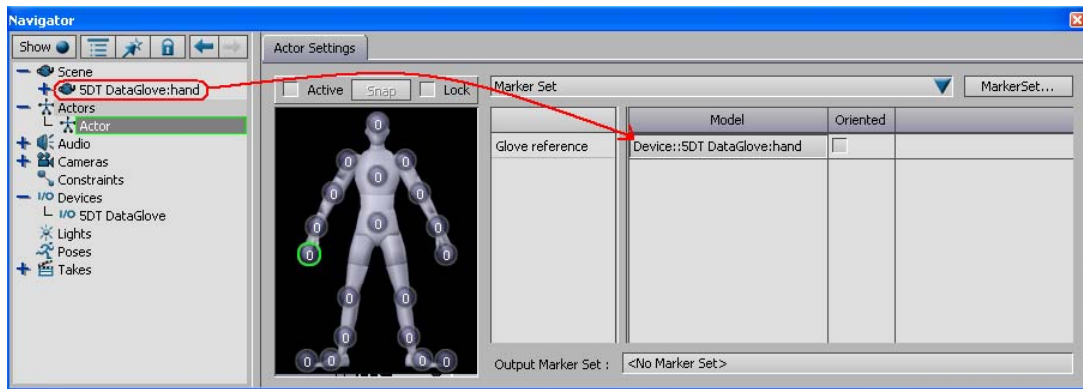

**Figure 36 – Assigning a Glove Reference to a Marker Set**

## 6. Using the SDK

---

### 6.1. Introduction

The 5DT Data Glove SDK provides access to the 5DT range of data gloves at an intermediate level.

The Windows 98/NT/Me/XP version is provided in the form of a C/C++ header (.h) file, a Microsoft Visual C++ library (.lib) file and a dynamic link library (.dll) file.

The SDK functionality includes:

- Multiple instances
- Easy initialization and shutdown
- Basic (raw) sensor values
- Scaled (auto-calibrated) sensor values
- Calibration functions
- Basic gesture recognition
- Cross-Platform Application Programming Interface

***The SDK functions are described in detail in Appendix C.***

### 6.2. Using the SDK

The 5DT Data Glove Driver is easy to implement using the following guidelines:

1. Make sure that the header file `fglove.h`, the library file `fglove.lib` and the dynamic link library file `fglove.dll` reside in the current (application) directory, or somewhere that they can be found. The file `fglove.dll` may be copied into your Windows system directory.
2. Include the header file `fglove.h` in the application where necessary.
3. Add the library file `fglove.lib` to the link process.

There is also a debug version of the driver (`fgloved.lib`, `fgloved.dll`) which outputs debug messages to the debugger.

### 6.3. Sample Source Code

In the samples directory, there is sample source code that makes use of the glove SDK. Both a console application as well as a Microsoft® Visual Studio® 6 project is included.

## 6.4. Supported Gloves

The glove SDK supports all 5DT Data Gloves. The current version implements 18 possible sensors, and includes the roll and pitch sensors of the 5DT Data Glove 5. The driver attempts to map values to all sensor outputs. If it is unable to do so the sensor value defaults to a sensible value. This value can be adjusted by forcing a specific value. To the application programmer the driver therefore appears the same regardless of the type of glove that is connected.

## 6.5. Sensor Mappings for the 5DT Data Glove 5

The sensors on the 5DT Data Glove 5 are positioned as in Figure 37.

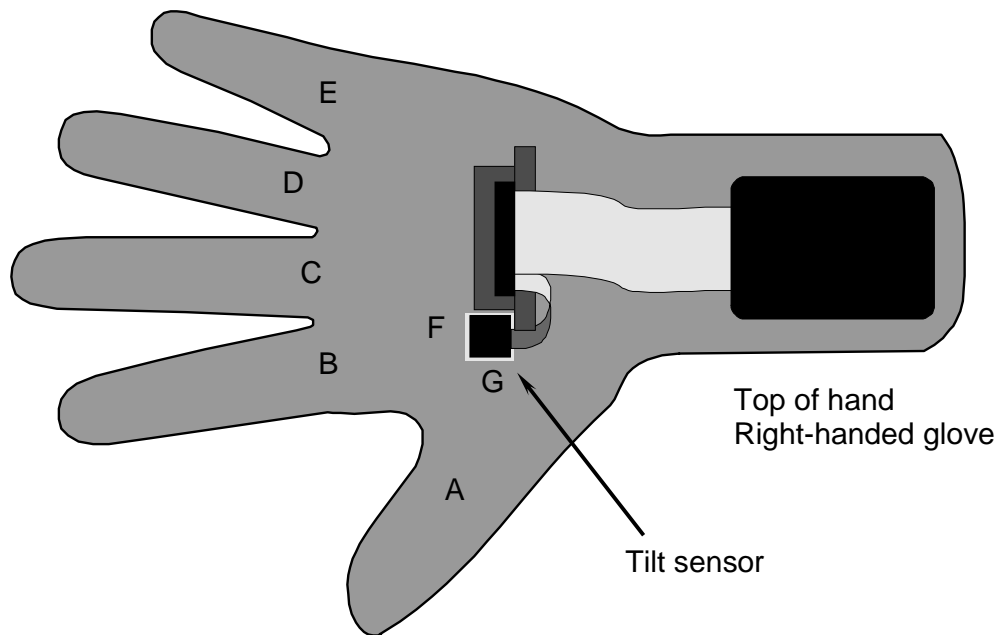


Figure 37 - Sensor Positions for the 5DT Data Glove 5

<i>Sensor</i>	<i>Driver Sensor Index</i>	<i>Description</i>
A	0,1*	Thumb flexure
B	3,4*	Index finger flexure
C	6,7*	Middle finger flexure
D	9,10*	Ring finger flexure
E	12,13*	Little finger flexure
F	16*	Pitch angle of tilt sensor
G	17*	Roll angle of tilt sensor

Table 3 - Sensor Mappings for the 5DT Data Glove 5 and 5DT Data Glove 5 Ultra

\* Both these driver sensor indices will return the same value when the 5DT Data Glove 5 or Data Glove 5 Ultra is used.

+ Not available on the Data Glove 5 Ultra.



## 6.6. Sensor Mappings for the 5DT Data Glove 16 and 14 Ultra

The sensors on the 5DT Data Glove 16 are positioned as in Figure 38.

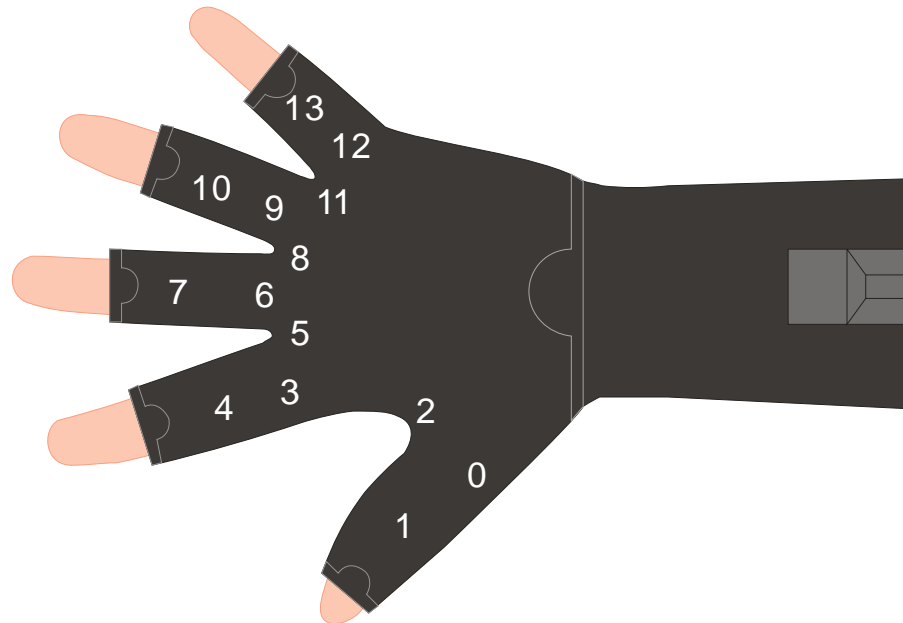


Figure 38 – Sensor Mappings for the 5DT Data Glove 16 and 5DT Data Glove 14 Ultra

<i>Sensor</i>	<i>Driver Sensor Index</i>	<i>Description</i>
0	0	Thumb flexure ( lower joint )
1	1	Thumb flexure ( second joint )
2	2	Thumb-index finger abduction
3	3	Index finger flexure ( at knuckle )
4	4	Index finger flexure ( second joint )
5	5	Index-middle finger abduction
6	6	Middle finger flexure ( at knuckle )
7	7	Middle finger flexure ( second joint )
8	8	Middle-ring finger abduction
9	9	Ring finger flexure ( at knuckle )
10	10	Ring finger flexure ( second joint )
11	11	Ring-little finger abduction
12	12	Little finger flexure ( at knuckle )
13	13	Little finger flexure ( second joint )

Table 4 – Sensor Mappings for the 5DT Data Glove 16 and 5DT Data Glove 14 Ultra

## 6.7. Gesture Definitions

The currently defined set of gestures is comprised of binary open/close configurations of the fingers excluding the thumb. There are  $2^4 = 16$  such possible combinations. Gesture number 0 is defined as all the fingers (excluding the thumb) being closed, and gesture number 15 as all the fingers open. The index finger indicates the least significant bit. For example, the index finger point gesture will therefore be number 1, and the little finger point gesture number will be 8. An invalid (unrecognizable) gesture is defined as the value -1.

A scaled sensor value of higher than the upper threshold setting will indicate a closed finger, while a scaled sensor value of lower than the lower threshold setting will indicate an open finger. A value in-between is invalid and will result in an invalid gesture. In the case of multiple finger joint angle measurements, the maximum of the individual joint sensor values is taken to obtain a closed gesture and the minimum to obtain an open gesture. Closed gestures take precedence, in other words, bending only one joint of a finger will count as a closed gesture.

Finger:	Little	Ring	Middle	Index
5DT Data Glove 5 sensor:	E	D	C	B
5DT Data Glove 16 & 14 Ultra sensor:	12,13	9,10	6,7	3,4
Driver sensor index:	12,13#	9,10#	6,7#	3,4#

Gesture Number	Flexure (0=flexed, 1=unflexed)				Gesture Description	Fig.
0	0	0	0	0	Fist	16.0
1	0	0	0	1	Index finger point	16.1
2	0	0	1	0	Middle finger point	16.2
3	0	0	1	1	Two finger point	16.3
4	0	1	0	0	Ring finger point	16.4
5	0	1	0	1	Ring index point	16.5
6	0	1	1	0	Ring middle point	16.6
7	0	1	1	1	Three finger point	16.7
8	1	0	0	0	Little finger point	16.8
9	1	0	0	1	Index and little finger	16.9
10	1	0	1	0	Little middle point	16.1
11	1	0	1	1	Not ring finger point	16.1
12	1	1	0	0	Little ring point	16.1
13	1	1	0	1	Not middle finger point	16.1
14	1	1	1	0	Not index finger point	16.1
15	1	1	1	1	Flat hand	16.1

**Table 4 - Gesture Definition Scheme as Implemented for the 5DT Data Glove SDK**

# When the 5DT Data Glove 5 is used, both these driver sensor indices will return the same value.



**Figure 16 - Gesture Illustrations**

When the 5DT Data Glove 16 or 5DT Data Glove 14 Ultra is used, the driver sensor indices will return different values. The maximum of the two values will

be used to test for a flexed (closed) gesture, and the minimum value of the two will be used to test for an unflexed (open) gesture.

### 6.8. Auto-Calibration

The driver can provide sensor outputs in an automatic, linearly calibrated fashion. During every update, the raw value read from the sensor is compared to the current minimum and maximum raw values ( $raw_{min}$  and  $raw_{max}$ ) as set by the functions `fdSetCalibrationAll()`, `fdSetCalibration()` or `fdResetCalibration()`. If the current minimum and maximum values are exceeded, they are overwritten. The upper and lower calibration values are therefore continuously pushed "outwards". The normalized output is given by the first order equation

$$out = \frac{raw_{val} - raw_{min}}{raw_{max} - raw_{min}} \cdot Max, \quad (F-1)$$

which is in  $[0...Max]$ . The value of  $Max$  is set by the functions `fdSetSensorMaxAll()` and `fdSetSensorMax()`. Doing a few flexing movements with the hand quickly sets the operating values for  $raw_{min}$  and  $raw_{max}$ , and calibrates the glove.

The auto-calibration process can be ignored by simply regarding only the raw sensor outputs. It would be up to the application developer to provide a suitable calibration process.

***Note that calibration is mandatory, especially with the high-end gloves which contain no hardware calibration possibilities.***

## 7. Troubleshooting and Support

---

The following information is provided to help you diagnose any problems that may be encountered with your 5DT Data Glove Ultra or 5DT Data Glove Ultra Wireless Kit. Please consult this section before contacting your supplier.

### 7.1. General Troubleshooting

If the glove is not working at all, please work through the **physical connection problems** section of the troubleshooting procedure to identify the source of the problem.

#### 7.1.1 Physical Connection Problems

1. Check that power is connected to the receiver as well as to the wireless data transmitter. There should be a green light on the transmitter when power is applied.
2. Check that the glove is connected to the right port. Try to connect the glove to another port and try again.
3. Check all the connections. Section 2.2 has information on how to correctly connect the system.
4. Check that the port is working. Try connecting another device, for example an external modem.

If the 5DT Data Glove is recognized by your computer but not connecting properly, proceed directly to the **software connection problems** section.

#### 7.1.2 Software Connection Problems

Run **GloveManager** from the start menu. Check which COM ports are available by looking at the list in Figure 3. Remember that not all available ports will be physically connected to a socket on the back of your computer. Some ports may be unavailable because other programs have already taken control of the ports. Examples are mouse drivers and fax or communication programs.

### 7.2. Frequently Asked Questions (FAQ)

- Q** My gloves are connected to COM2, but Glove Manager reports that this port is not available.
- A** There may be a mouse driver, or other program that has already opened that port. Once a program or driver has opened a COM port, no other program will be able to access that port until the first one closes.
- Q** Is it possible to use the 5DT Data Glove Ultra in a LINUX environment?
- A** No, the Linux version of the SDK does not support the 5DT Data Glove Ultra, but check our website regularly for updates.

**Q** Can I use four (or more) serial gloves on one machine at the same time?

**A** 5DT just loves people like you! The number of gloves is limited by the number of serial ports on your computer. Multiport cards are available that have up to eight serial ports on them and you only need one serial port per wireless pair. It is also possible to obtain a USB (Universal Serial Bus) device that has many RS 232 serial ports on it.

**Q** When I flex a finger, the output does not change but stays at the maximum value. What is the problem?

**A** In this case it is possible that one of the fibers has failed. The glove will then have to be returned to the supplier (or 5DT) for repairs.

### **7.3. Support**

If you experience problems or have complaints, suggestions or other comments, please feel free to contact your supplier (preferably via e-mail). Please have the following information available, or include it in your written correspondence:

1. Computer processor make and model (e.g. Pentium IV 3.2GHz)
2. Operating system and version
3. The symptoms of the problem and what was happening when the problem occurred
4. Can you reproduce the problem easily? Describe how
5. Actions taken by yourself to solve the problem

Please feel free to contact 5DT directly. Our contact details are available in Section 9.

***Your feedback helps make this a truly great product.***

## 8. Warranty Information

---

### 8.1. Thirty (30) Day Customer Satisfaction Guarantee

If, for any reason, you are disappointed with this product, please contact your supplier. If you are not completely satisfied, you will be granted a full refund once the product is returned undamaged. Unfortunately, shipping costs cannot be refunded.

### 8.2. One (1) Year Product Warranty

5DT warrants to the original purchaser of the 5DT Data Glove 14 Ultra Wireless Kit that it will be free of defects in materials and workmanship for a period of one year from the original date of purchase. During the warranty period, 5DT will repair or replace (with a reconditioned unit) components that are defective.

### 8.3. Exclusions

The above warranty is provided for private use only and shall not apply to any commercial use of the product, including (but not limited to):

- Location based entertainment (LBE) applications
- Trade show demonstrations

This warranty shall not apply to defects resulting from the following:

- Misuse
- Improper or inadequate maintenance
- Unauthorized modification

### 8.4. Warranty Claim Instructions

Please use the following procedure if you require warranty service:

1. Contact your supplier to determine if you need to return the product. If your supplier is unable to determine this, contact 5DT directly. Do not return a product to your supplier or to 5DT **without first contacting them**.
2. Your supplier (or 5DT) will issue you with a Return Material Authorization (RMA) number. Do not return a product to your supplier or to 5DT without an RMA number.
3. Pack the items to be returned securely using the original packaging material (if possible).
4. Please enclose the following:
  - Your original sales bill
  - Name, address, contact telephone/fax numbers
  - E-mail address
  - Reason for returning the item
  - RMA number

5. Mark your shipping container with the RMA number to expedite handling at your supplier or at 5DT.
6. Ship prepaid to your supplier or to 5DT.
7. When completing customs or courier documentation, please clearly indicate: "Unit returned for repairs under warranty".

5DT is not responsible for any damage that may occur during shipping. Shipping charges to 5DT are your responsibility. COD shipments will not be accepted by 5DT.



## 9. About 5DT

---

5DT <Fifth Dimension Technologies> is a high technology company specializing in Virtual Reality (VR). 5DT develops, produces and distributes affordable virtual reality hardware, software and systems. 5DT can also develop custom systems for all your VR needs.

5DT's focus is Virtual Reality Training Systems and Virtual Reality Peripherals.

### **The Virtual Reality hardware currently produced by 5DT includes:**

- 5DT Data Glove 5 (Right and left)
- 5DT Data Glove 5-W (Wireless, right and left)
- 5DT Data Glove 5 Ultra
- 5DT Data Glove 16 (Right and left)
- 5DT Data Glove 16-W (Wireless, right and left)
- 5DT Data Glove 14 Ultra
- 5DT Data Glove 14 Ultra Wireless Kit
- 5DT Data Glove MRI
- 5DT Virtual Binoculars
- 5DT Head Mounted Display (HMD)
- 5DT Virtual Binoculars
- 5DT Motion Base

### **VR Software Systems developed by 5DT include:**

- Automotive
  - Driving Training Simulator Series
  - Road Safety Training System
- Aviation
  - Airspace Visualizer
  - Air Traffic Control (ATC) Training Simulator
  - Experimental Avionics Testbed
  - Unmanned Aerial Vehicle (UAV) Training Simulator
- Defense
  - Air Defense Training Simulator
  - Fiber Optic Guided Missile Training System and Training Simulator
  - Rocket Launcher Training Simulator
  - Stand-Off Weapon Training Simulator and Visualizer
- High Voltage
  - High Voltage Line Inspection Logging System
  - High Voltage Line Inspection Training Simulator
  - High Voltage Line Inspection Training System (CBT)
  - High Voltage Line Repair Training System
  - High Voltage Line Visualization System
  - High Voltage Yard Training Simulator
- Medical
  - Bronchoscope Training Simulator

- Exposure Treatment Phobia Simulator
- Gastroscope Training Simulator
- Tele-Rehabilitation (TR) System
- Virtual Reality Pain Distraction System
- Mining
  - Underground Mining
    - Continuous Miner Training Simulator
    - Long Wall Training Simulator
    - Roof Bolter Training Simulator
  - Surface Mining
    - Haul Truck Training Simulator
    - Shovel Training Simulator
    - Wheeled Loader Training Simulator
    - Dragline Training Simulator
- Visualization
  - Flight Visualization System
  - Flow Visualization System
  - High Voltage Line Visualization System
- Other
  - Virtual Landscape Generation Technology

## **Contact Information**

### **United States and Americas - 5DT Inc**

15375 Barranca Pkwy, G-103

Irvine, CA 92618, USA

United States of America

Tel: +1 949 450-9044

Fax: +1 949 450-9045

e-mail: info.us@5dt.com

Web: www.5dt.com

### **Rest of World - 5DT (Fifth Dimension Technologies)**

25 De Havilland Crescent, P.O. Box 5

Perseuor Park, 0020

South Africa

Tel: +27 12 349 2690

Fax: +27 12 349 1404

E-mail: info@5dt.com

Web: www.5dt.com

## **Appendix A – Hardware Specifications**

---

- MATERIAL:** Black stretch lycra
- FLEXURE RESOLUTION:** 12-bit A/D for each sensor  
Minimum dynamic range is 8-bits
- BEND SENSORS:** Data Glove 14 Ultra:  
Proprietary fiber optic based flexor technology. 2 sensors per finger, 1 sensor between each finger  
Data Glove 5 Ultra:  
Proprietary fiber optic based flexor technology. 1 sensor per finger, measures average of knuckle and first joint.
- COMPUTER INTERFACE:** Full-speed USB *or*  
RS 232 (3-wire)  
GND, TX, RX  
115kbps  
8 data bits, 1 stop bit, no parity
- POWER SUPPLY:** Maximum 5 V DC  
Center positive DC power connector
- SAMPLING RATE:** The full hand (all available sensors) may be sampled at least 60 times per second.

At 5DT we constantly try to improve our products As a result, these specifications are subject to change without prior notice.

## Appendix B – Serial Protocol

The data glove is connected to the RS-232 port of the computer. The 5DT Data Glove Ultra Wireless Kit is a transmit-only device, as it does not respond to any commands sent to it.

The 5DT Data Glove Ultra has the following serial settings:

- 115200 bits per second
- 8 data bits, 1 stop bit, no parity
- Hardware handshaking: none

The glove data arrives in packets. If two gloves' data is present on the data stream, then the packets will alternate from one glove then the other. It is possible to distinguish the two by identifying the glove type from the type byte.

The data packet sent by the glove is structured as follows:

Byte No.	Byte	Byte No.	Byte
1	Start	17	10Lu   10LI
2	Type Byte	18	11HI   11Lu
3	Version	19	11LI   12HI
4	1LI   2HI	20	12Lu   12LI
5	2Lu   2LI	21	13HI   13Lu
6	3HI   3Lu	22	13LI   14HI
7	3LI   4HI	23	14Lu   14LI
8	4Lu   4LI	24	15HI   15Lu
9	5HI   5Lu	25	15LI   16HI
10	5LI   6HI	26	16Lu   16LI
11	6Lu   6LI	27	Checksum
12	7HI   7Lu	28	Footer
13	7LI   8HI		
14	8Lu   8LI		
15	9HI   9Lu		
16	9LI   10HI		

Table 5 - 5DT Data Glove 14 Ultra Packet Description

The bytes of the packet are defined as follows:

### Header

Packet start byte defined as the '<' character. Hex value: **0x3c**

### **Glove Type**

The glove type identifier byte. The following values are defined:

- 0x00** – Data Glove14 Ultra wired right hand glove
- 0x01** – Data Glove14 Ultra wired left hand glove
- 0x02** – Data Glove14 Ultra wireless right hand glove (Port A)
- 0x03** – Data Glove14 Ultra wireless left hand glove (Port A)
- 0x06** – Data Glove14 Ultra wireless right hand glove (Port B)
- 0x07** – Data Glove14 Ultra wireless left hand glove (Port B)
- 0x10** – Data Glove 5 Ultra wired right hand glove
- 0x11** – Data Glove 5 Ultra wired left hand glove
- 0x12** – Data Glove 5 Ultra wireless right hand glove (Port A)
- 0x13** – Data Glove 5 Ultra wireless left hand glove (Port A)
- 0x16** – Data Glove 5 Ultra wireless right hand glove (Port B)
- 0x17** – Data Glove 5 Ultra wireless left hand glove (Port B)

### **Version**

The firmware version byte. The upper nibble (Vmaj) represents the version major, the lower nibble (Vmin) represents the version minor.

#### **xHI**

The upper four bits of the 12-bit sensor value, or the lower nibble of the MSB of the 12-bit sensor value.

#### **xLh**

The middle four bits of the 12-bit sensor value, or the upper nibble of the LSB of the 12-bit sensor value.

#### **xLI**

The lower four bits of the 12-bit sensor value, or the lower nibble of the LSB of the 12-bit sensor value.

### **Checksum**

The 8-bit checksum is computed by adding all the data bytes.

### **Footer**

Packet stop byte defined as the '>' character. Hex value: **0x3e**

## Appendix C – SDK Function Descriptions

---

The following functions are available in the SDK:

<b>fdGlove *fdOpen(char *pPort)</b>
-------------------------------------

Initializes the glove device on the specified port.

### Return value

Returns a pointer to the glove device (fdGlove \*). NULL is returned if an error occurred.

### Parameter

pPort

Pointer to a zero terminated ASCII string containing the name of the communication port. Valid values on Windows range from "COM1" to "COM8". Unix/Linux port names will differ.

### Remarks

Do not attempt to alter the contents of the returned pointer directly, use the functions provided instead.

<b>int fdClose(fdGlove *pFG)</b>
----------------------------------

Frees the glove device and communications port.

### Return value

Returns nonzero if successful, zero if an error occurred.

### Parameters

pFG

Pointer to a glove device. This is the value returned by fdOpen().

### Remarks

It is important to call this function when you are finished using the glove.

<b>int fdScanUSB(unsigend short *aPID, int &amp;nNumMax)</b>
--

Scans the USB for available gloves.

### Return value

Returns the number of gloves found during the scan.

### Parameters

aPID

Pointer an unsigned short array of length nNumMax. The USB Product IDs (PIDs) of the gloves found are returned in this array. The following PIDs are defined:

DG14U\_R – Data Glove 14 Ultra Right-hand

DG14U\_L – Data Glove 14 Ultra Left-hand

DG5U\_R – Data Glove 5 Ultra Right-hand

DG5U\_L – Data Glove 5 Ultra Left-hand

nNumMax

The length of the aPID array. The number of gloves found is also returned in this parameter.

#### Remarks

None.

```
int fdGetGloveHand(fdGlove *pFG)
```

Obtains the handedness (left or right handed) of the glove.

#### Return value

Returns either `FD_HAND_LEFT` or `FD_HAND_RIGHT`, as defined by the enumerated type `EfdGloveHand`.

#### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

#### Remarks

None.

```
int fdGetGloveType(fdGlove *pFG)
```

Obtains the type of the currently connected glove.

#### Return value

Returns one of `FD_GLOVENONE`, `FD_GLOVE7`, `FD_GLOVE7W`, `FD_GLOVE16`, `FD_GLOVE16W`, `FD_GLOVE14U`, `FD_GLOVE14UW`, or `FD_GLOVE14U_USB`, as defined by the enumerated type `EfdGloveTypes`.

#### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

#### Remarks

`FD_GLOVE7` and `FD_GLOVE7W` refer to the original 5+2 (tilt angles) sensor glove (5DT Data Glove 5). The `W` suffix indicates a wireless model. `FD_GLOVE16` and `FD_GLOVE16W` refer to the Data Glove 16. `FD_GLOVE14`, `FD_GLOVE14W`, and `FD_GLOVE14_USB` refer to the Data Glove 14 Ultra. The `USB` suffix refers to the Universal Serial Bus interface. In order to accommodate all glove types the `fdGetNumSensors()` function currently returns 18 sensors. The additional two sensors are defined as the original tilt angles that are not present in the 16-sensor glove. See the description of `fdGetNumSensors()` for more details.

```
int fdGetNumSensors(fdGlove *pFG)
```

Obtains the number of available sensors values the driver can make available.

#### Return value

Returns the number of sensors. Currently it is fixed at 18, but future driver releases may differ.

#### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

#### Remarks

Although the 5-sensor glove can measure only average flexure, the driver will attempt to fill in missing values. The number of sensors returned can therefore be of a higher dimension. The enumerated type `EfdSensors` defines the finger mapping for each sensor.

<b><code>void fdGetSensorRawAll(fdGlove *pFG, unsigned short *pData)</code></b>
---

Obtains the most recent raw sensor values from the currently connected glove.

#### Return value

None.

#### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

pData

Pointer to an array of 16-bit integers that will contain the raw sensor values. The size of the array must always match the value returned by `fdGetNumSensors()`.

#### Remarks

Currently the raw sensor samples are all 12 bit unsigned values. The range is therefore from 0 to 4095. Note that this is not the dynamic range of the sensors. There can be severe offset values associated with each sensor. The enumerated type `EfdSensors` defines the finger mapping for each sensor.

<b><code>unsigned short fdGetSensorRaw(fdGlove *pFG, int nSensor)</code></b>
--

Obtains the most recent raw sensor value for a specific sensor from the currently connected glove.

#### Return value

Returns a 16-bit integer. See `fdGetSensorRawAll()` for details.

#### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

nSensor

Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

#### Remarks



The enumerated type `EfdSensors` defines the finger mapping for each sensor.

```
void fdSetSensorRawAll(fdGlove *pFG, unsigned short *pData)
```

Forces the raw value for all the sensors.

#### **Return value**

None.

#### **Parameters**

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pData`

Pointer to an array of 16-bit integers that will contain the raw sensor values. The size of the array must always match the value returned by `fdGetNumSensors()`.

#### **Remarks**

Currently the raw sensor samples are all 12 bit unsigned values. The range is therefore from 0 to 4095. The enumerated type `EfdSensors` defines the finger mapping for each sensor. Forcing a sensor value will result in a raw and scaled output other than the default zero. Values that can be mapped will be overwritten, rendering the forced value void.

```
void fdSetSensorRaw(fdGlove *pFG, int nSensor, unsigned short nRaw)
```

Forces the raw value for a specific sensor.

#### **Return value**

None.

#### **Parameters**

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`nSensor`

Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

`nRaw`

16 bit raw value of the sensor. If the sensor is unmapped, the scaling calculations will proceed as normal.

#### **Remarks**

The enumerated type `EfdSensors` defines the finger mapping for each sensor. This function is only useful for sensors that cannot be mapped by a specific hardware device. Forcing a sensor value will result in a raw and scaled output other than the default zero. Values that can be mapped will be overwritten, rendering the forced value void.

```
void fdGetSensorScaledAll(fdGlove *pFG, float *pData)
```

Obtains the most recent scaled (auto-calibrated) sensor values from the currently connected glove.

**Return value**

None.

**Parameters**

*pFG*

Pointer to a glove device. This is the value returned by `fdOpen()`.

*pData*

Pointer to an array of floating point numbers that will contain the scaled sensor values. The size of the array must always match the value returned by `fdGetNumSensors()`.

**Remarks**

The sensor range is a value from zero to the value defined by the `fdSetSensorMax()` and `fdSetSensorMaxAll()` functions. The glove driver defaults to a range of [0...1]. The automatic calibration process is described in section 6. The enumerated type `EfdSensors` defines the finger mapping for each sensor.

```
float fdGetSensorScaled(fdGlove *pFG, int nSensor)
```

Obtains the most recent scaled (auto-calibrated) value for a specific sensor from the currently connected glove.

**Return value**

Returns a floating point sensor value.

**Parameters**

*pFG*

Pointer to a glove device. This is the value returned by `fdOpen()`.

*nSensor*

Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

**Remarks**

The sensor range is a value from zero to the value defined by the `fdSetSensorMax()` and `fdSetSensorMaxAll()` functions. The glove driver defaults to a range of [0...1]. The automatic calibration process is described in section 6. The enumerated type `EfdSensors` defines the finger mapping for each sensor.

```
int fdGetNumGestures(fdGlove *pFG)
```

Obtains the number of available gestures that can be recognized by the glove driver.

**Return value**

Returns the number of available gestures. Currently 16 different gestures are supported. Refer to section 5 for details.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by fdOpen( ).

**Remarks**

None.

```
int fdGetGesture(fdGlove *pFG)
```

Obtains the current gesture being performed.

**Return value**

Returns the current gesture being performed. Refer to section 5 for details.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by fdOpen( ).

**Remarks**

None.

```
void fdGetCalibrationAll(fdGlove *pFG, unsigned short *pUpper, unsigned short *pLower)
```

Obtains the current auto-calibration settings of the driver.

**Return value**

None.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by fdOpen( ).

pUpper and pLower

Arrays of 16 bit unsigned integers that will contain the maximum and minimum raw sensor values. The size of each array must always match the value returned by fdGetNumSensors( ). Refer to section 6 for details.

**Remarks**

None.

```
void fdGetCalibration(fdGlove *pFG, int nSensor, unsigned short *pUpper, unsigned short *pLower)
```

Obtains the current auto-calibration settings of the driver for a specific sensor.

**Return value**

None.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

`nSensor`

Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

`pUpper` and `pLower`

Pointers to 16 bit unsigned integers containing the maximum and minimum raw sensor values. Refer to section 6 for details.

#### Remarks

None.

```
void fdSetCalibrationAll(fdGlove *pFG, unsigned short
*pUpper, unsigned short *pLower)
```

Resets the current auto-calibration settings of the driver to user defined values.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pUpper` and `pLower`

Arrays of 16 bit unsigned integers containing the maximum and minimum raw sensor values. The size of each array must always match the value returned by `fdGetNumSensors()`. Refer to section 6 for details.

#### Remarks

For unmapped sensors it would be sensible to set the upper and lower calibration settings above and below the raw value forced with `fdSetSensorRaw()` and `fdSetSensorRawAll()`.

```
void fdSetCalibration(fdGlove *pFG, int nSensor, unsigned
short nUpper, unsigned short nLower)
```

Resets the current auto-calibration settings of the driver for a specific sensor to user defined values.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`nSensor`

Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

nUpper and nLower

16 bit unsigned integers containing the maximum and minimum raw sensor values. Refer to section 6 for details.

### Remarks

For unmapped sensors it would be sensible to set the upper and lower calibration settings above and below the raw value forced with `fdSetSensorRaw()` and `fdSetSensorRawAll()`.

<b>void fdResetCalibration(fdGlove *pFG)</b>
--

Resets the internal auto-calibration settings of the driver to appropriate default values (for all the sensors).

### Return value

None.

### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

### Remarks

This function is similar to the `fdSetCalibrationAll()` function with each of the upper and lower calibration array values set to 0 and 4095 respectively. This function, or any of the other calibration functions, should be called whenever the application starts up or the glove changes users during run-time. For unmapped sensors the upper and lower calibration values are set to 4095 and 0 respectively, which is the *inverse* of the auto-calibration settings. If auto calibration was turned off, it is turned on again.

<b>void fdResetCalibration(fdGlove *pFG, int nSensor)</b>
---

Resets the internal auto-calibration settings of the driver to appropriate default values (for a specific sensor).

### Return value

None.

### Parameters

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

nSensor

Index of the sensor whose calibration values are to be reset.

### Remarks

This function is similar to the `fdSetCalibrationAll()` function with each of the upper and lower calibration array values set to 0 and 4095 respectively. This function, or any of the other calibration functions, should be called whenever the application starts up or the glove changes users during run-time. For unmapped sensors the upper and lower calibration values are set to 4095 and 0

respectively, which is the *inverse* of the auto-calibration settings. If auto calibration was turned off, it is turned on again.

```
void fdGetSensorMaxAll(fdGlove *pFG, float *pMax)
```

Obtains the maximum scaled value for each sensor.

**Return value**

None.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by fdOpen().

pMax

Array of floating point values that will contain the maximum scaled sensor values. The size of the array must always match the value returned by fdGetNumSensors().

**Remarks**

The glove driver defaults to a maximum scaled value of 1 for each sensor.

```
float fdGetSensorMax(fdGlove *pFG, int nSensor)
```

Obtains the maximum scaled value for a specific sensor.

**Return value**

Returns the maximum scaled values of the sensor.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by fdOpen().

nSensor

Index of the sensor that is being queried. The value must lie in the range given by the enumerated type EfdSensors, or alternatively from zero to the value returned by fdGetNumSensors() minus one.

**Remarks**

The glove driver defaults to a maximum scaled value of 1 for each sensor.

```
void fdSetSensorMaxAll(fdGlove *pFG, float *pMax)
```

Sets the maximum scaled value for each sensor.

**Return value**

None.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by fdOpen().

pMax

Array of floating point values that contains the maximum scaled sensor values. The size of the array must always match the value returned by `fdGetNumSensors()`.

#### Remarks

The glove driver defaults to a maximum scaled value of 1 for each sensor.

```
void fdSetSensorMax(fdGlove *pFG, int nSensor, float fMax)
```

Sets the maximum scaled value for a specific sensor.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`nSensor`

Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

`fMax`

A floating point value that contains the maximum scaled sensor value.

#### Remarks

The glove driver defaults to a maximum scaled value of 1 for each sensor.

```
void fdGetThresholdAll(fdGlove *pFG, float *pUpper, float *pLower)
```

Obtains the current gesture recognition threshold settings of the driver.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pUpper` and `pLower`

Arrays of floating point numbers that will contain the maximum and minimum threshold values. The size of each array must always match the value returned by `fdGetNumSensors()`. Refer to section 6 for details.

#### Remarks

None.

```
void fdGetThreshold(fdGlove *pFG, int nSensor, float *pUpper, float *pLower)
```

Obtains the current gesture recognition threshold settings of the driver for a specific sensor.

**Return value**

None.

**Parameters**

*pFG*

Pointer to a glove device. This is the value returned by `fdOpen()`.

*nSensor*

Index of the sensor that is being queried. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

*pUpper* and *pLower*

Pointers to floating point numbers that will contain the maximum and minimum threshold values. Refer to section 6 for details.

**Remarks**

None.

```
void fdSetThresholdAll(fdGlove *pFG, float *pUpper, float *pLower)
```

Sets the current gesture recognition threshold settings of the driver.

**Return value**

None.

**Parameters**

*pFG*

Pointer to a glove device. This is the value returned by `fdOpen()`.

*pUpper* and *pLower*

Arrays of floating point numbers that contains the maximum and minimum threshold values. The size of each array must always match the value returned by `fdGetNumSensors()`. Refer to section 6 for details.

**Remarks**

None.

```
void fdSetThreshold(fdGlove *pFG, int nSensor, float fUpper, float fLower)
```

Sets the current gesture recognition threshold settings of the driver for a specific sensor.

**Return value**

None.

**Parameters**

*pFG*

Pointer to a glove device. This is the value returned by `fdOpen()`.

*nSensor*



Index of the sensor that is being set. The value must lie in the range given by the enumerated type `EfdSensors`, or alternatively from zero to the value returned by `fdGetNumSensors()` minus one.

`fUpper` and `fLower`

Floating point numbers that contain the maximum and minimum threshold values. Refer to section 6 for details.

#### Remarks

None.

```
void fdGetGloveInfo(fdGlove *pFG, unsigned char *pData)
```

Obtains the information data block of the currently connected glove.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pData`

Array of 32 bytes that will contain the information data.

#### Remarks

The information data is specified in the glove user's manual. The size of the information block is always 32 bytes.

```
void fdGetDriverInfo(fdGlove *pFG, unsigned char *pData)
```

Obtains the information data block of the driver.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pData`

Array of 32 bytes that will contain the information data.

#### Remarks

The information data is a zero terminated string that contains driver information. The size of the information block is always 32 bytes.

```
void fdSetCallback(fdGlove *pFG, void *pFunc, LPVOID param)
```

Sets the Callback function and associated parameters.

#### Return value

None.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pFunc`

Pointer to the callback function. This should be cast to void.

`param`

The parameter to be given to the callback function.

### Remarks

This callback function is called every time a new packet is received by the driver. Example:

```
fdSetCallback(pGlove, (void *)&(DriverUpdate), this);
```

<b>int fdGetPacketRate(fdGlove *pFG)</b>
--

Obtains the latest packet rate.

### Return value

Returns the latest available packet rate as an integer.

### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

### Remarks

None.

<b>bool fdNewData(fdGlove *pFG)</b>
-------------------------------------

Indicates if the driver has received new data since this function was last called.

### Return value

Returns `true` if new data is available.

### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

### Remarks

This function may be used as an alternative to using the callback function to trigger events upon the arrival of new glove data.

<b>bool fdNewData(fdGlove *pFG)</b>
-------------------------------------

Indicates if the driver has received new data since this function was last called.

### Return value

Returns `true` if new data is available.

### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

### Remarks

This function may be used as an alternative to using the callback function to trigger events upon the arrival of new glove data.

```
int fdGetFWVersionMajor(fdGlove *pFG)
```

Obtains the major version of the glove's firmware.

**Return value**

Returns the major version of the glove's firmware as an integer.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

**Remarks**

This function has currently only been implemented for the Data Glove 14 Ultra. It will return 0 if the glove type isn't a Data Glove 14 Ultra variant. Example: if the firmware version is 3.2 then 3 is returned.

```
int fdGetFWVersionMinor(fdGlove *pFG)
```

Obtains the minor version of the glove's firmware.

**Return value**

Returns the minor version of the glove's firmware as an integer.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

**Remarks**

This function has currently only been implemented for the Data Glove 14 Ultra. It will return 0 if the glove type isn't a Data Glove 14 Ultra variant. Example: if the firmware version is 3.2 then 2 is returned.

```
bool fdGetAutoCalibrate(fdGlove *pFG)
```

Indicates if the driver is currently auto calibrating.

**Return value**

Returns `true` if the driver is currently auto calibrating.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

**Remarks**

None.

```
bool fdSetAutoCalibrate(fdGlove *pFG, bool bAutoCalibrate)
```

Turns auto calibration **on** or **off**.

**Return value**

Returns `true` if the driver is currently auto calibrating.

**Parameters**

pFG

Pointer to a glove device. This is the value returned by `fdOpen()`.

`bAutoCalibrate`

Boolean value indicating if auto calibration should be turned **on** (`true`) or **off** (`false`).

#### Remarks

Turn auto calibration off after calibrating to prevent the calibration values from being too extreme, thus causing scaled values of poor quality.

<b><code>bool fdSaveCalibration(fdGlove *pFG, const char *pFileName)</code></b>
---

Saves the current calibration values to file.

#### Return value

Returns `true` if the save operation completed successfully.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pFileName`

A null-terminated string containing the path and filename.

#### Remarks

Save your calibration values to file to prevent you from having to calibrate the glove every time you start your application.

<b><code>bool fdLoadCalibration(fdGlove *pFG, const char *pFileName)</code></b>
---

Loads calibration values from file. Current calibration values are discarded.

#### Return value

Returns `true` if the load operation completed successfully.

#### Parameters

`pFG`

Pointer to a glove device. This is the value returned by `fdOpen()`.

`pFileName`

A null-terminated string containing the path and filename.

#### Remarks

None.